


## 17. Brake Vacuum Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the brake vacuum sensor connector.
- 3) Remove the vacuum hose from the brake vacuum sensor.
- 4) Remove the bolt, and remove the brake vacuum sensor.

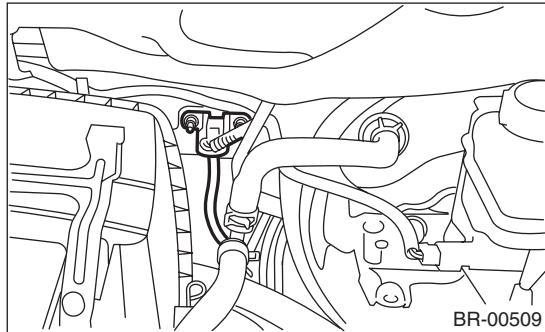

### B: INSTALLATION

Install in the reverse order of removal.

*Tightening torque:*

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)