



5. Rear Brake Pad

A: REMOVAL

- 1) Lift-up the vehicle, and then remove the rear wheels.
- 2) Remove the brake hose bracket.

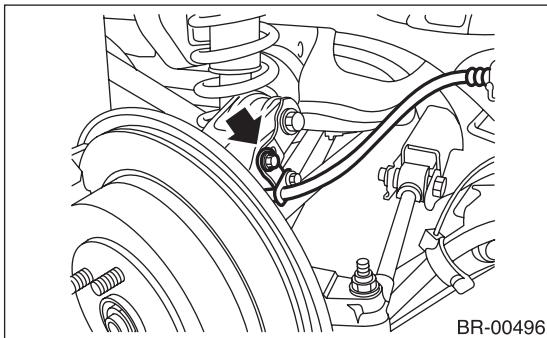

- 3) Remove the caliper bolt.

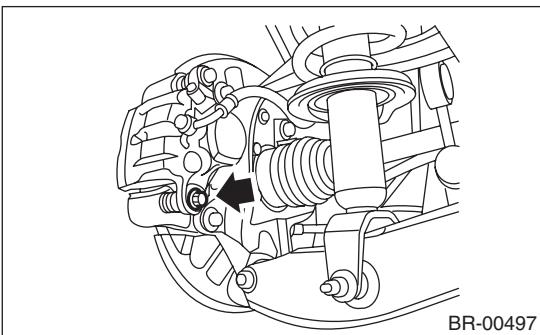


- 4) Raise the caliper body and support it.

NOTE:


Do not disconnect the brake hose from the caliper body.

- 5) Remove the pad.

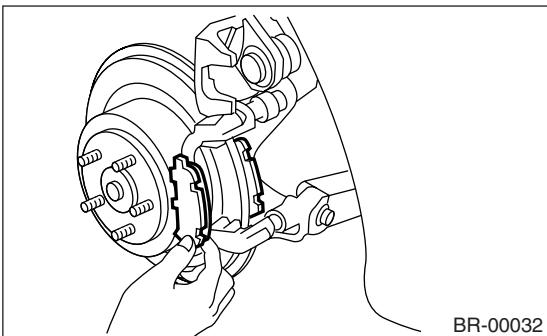

B: INSTALLATION

- 1) Apply a thin coat of Molykote M7439 to the pad clip.

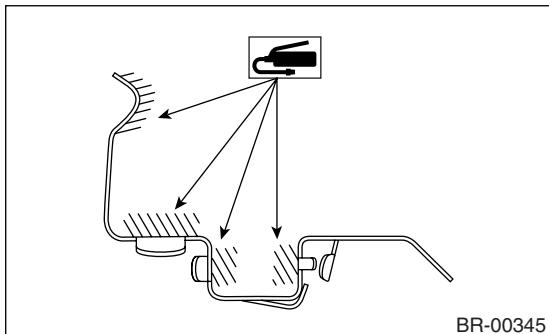


- 2) Apply a thin coat of Molykote AS880N (Part No. K0777YA010) to the contact surface between the pad and shim.
- 3) Install the pad to support.
- 4) Install the caliper body to the support.

Tightening torque:

27 N·m (2.8 kgf·m, 19.9 ft-lb)

C: INSPECTION

Check thickness A of the pad.

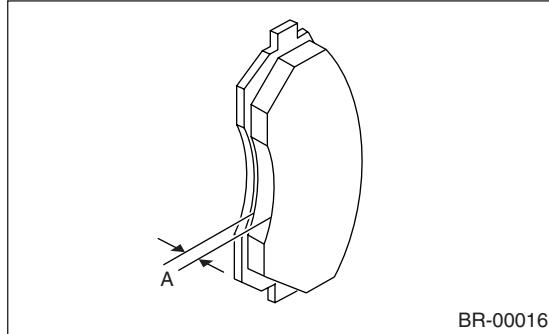

Pad thickness mm (in)	Specification	11.0 (0.433)
Wear limit		1.5 (0.059)

NOTE:

- Always replace the pads on both sides as a set.
- Replace pad clips if they are twisted or worn.
- A wear indicator is installed on the inner disc brake pad. If the pad is worn to the limit, the end of wear indicator contacts disc rotor, and a squeaking sound is heard as the wheel rotates. If the sound is heard, replace the pad.
- Replace the pad if there is oil or grease on it.