


3. Front Crossmember Support Plate

A: REMOVAL

- 1) Lift-up the vehicle.
- 2) Remove the front under cover. <Ref. to EI-17, REMOVAL, Front Under Cover.>
- 3) Remove the bolt and remove front crossmember support plate.

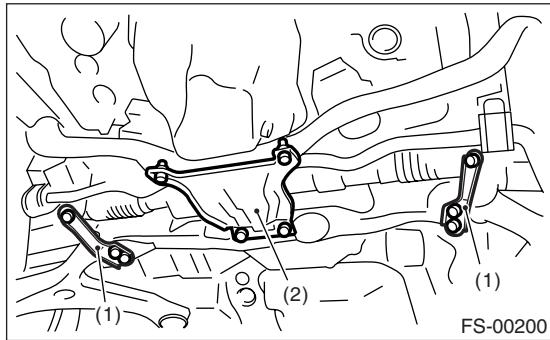

(1) Crossmember support plate
(2) Jack-up plate

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Crossmember support plate:

60 N·m (6.1 kgf-m, 44.3 ft-lb)

Jack-up plate:

60 N·m (6.1 kgf-m, 44.3 ft-lb)