

### 6. Read Diagnostic Trouble Code (DTC)

#### A: OPERATION

For details about reading of DTCs, refer to “Subaru Select Monitor”. <Ref. to TPM(diag)-8, Subaru Select Monitor.>