

### 7. Read Diagnostic Trouble Code (DTC)

#### A: OPERATION

For details concerning DTC reading procedure, refer to "Subaru Select Monitor". <Ref. to VDC(diag)-16, Subaru Select Monitor.>