

## General Diagnostic Table

### WHEEL AND TIRE SYSTEM

## 8. General Diagnostic Table

### A: INSPECTION

| Symptom                               | Possible cause            | Corrective action   |
|---------------------------------------|---------------------------|---|
| Wheel is out of balance.              | Improperly inflated tire. | Adjust the tire pressure.   |
|                                       | Uneven wear               | Check the tire referring to Abnormal tire wear in this table, carry out the procedure and replace the tire. |
|                                       | Front wheel alignment     | Check the front wheel alignment. <Ref. to FS-6, INSPECTION, Wheel Alignment.>                               |
|                                       | Rear wheel alignment      | Check the rear wheel alignment. <Ref. to RS-7, INSPECTION, Wheel Alignment.>                                |
|                                       | Front strut               | Check the front strut. <Ref. to FS-21, INSPECTION, Front Strut.>  |
|                                       | Rear shock absorber       | Check the rear shock absorber. <Ref. to RS-12, INSPECTION, Rear Shock Absorber.>                            |
|                                       | Front axle                | Check the front axle. <Ref. to DS-16, INSPECTION, Front Axle.>  |
|                                       | Front hub unit bearing    | Check the front hub unit bearing. <Ref. to DS-20, INSPECTION, Front Hub Unit Bearing.>                      |
|                                       | Rear hub unit bearing     | Check the rear hub unit bearing. <Ref. to DS-23, INSPECTION, Rear Hub Unit Bearing.>                        |
| Vehicle is abnormally out of balance. | Improperly inflated tire. | Adjust the tire pressure.   |
|                                       | Uneven wear               | Check the tire referring to Abnormal tire wear in this table, carry out the procedure and replace the tire. |
|                                       | Front stabilizer          | Inspect the front stabilizer. <Ref. to FS-14, INSPECTION, Front Stabilizer.>                                |
|                                       | Front wheel alignment     | Check the front wheel alignment. <Ref. to FS-6, INSPECTION, Wheel Alignment.>                               |
|                                       | Rear wheel alignment      | Check the rear wheel alignment. <Ref. to RS-7, INSPECTION, Wheel Alignment.>                                |
| Abnormal wheel vibration              | Improperly inflated tire. | Adjust the tire pressure.   |
|                                       | Uneven wear               | Check the tire referring to Abnormal tire wear in this table, carry out the procedure and replace the tire. |
|                                       | Improper wheel balancing  | Check the wheel balance. <Ref. to WT-8, ADJUSTMENT, Wheel Balancing.>                                       |
|                                       | Front axle                | Check the front axle. <Ref. to DS-16, INSPECTION, Front Axle.>  |
|                                       | Front hub unit bearing    | Check the front hub unit bearing. <Ref. to DS-20, INSPECTION, Front Hub Unit Bearing.>                      |
|                                       | Rear hub unit bearing     | Check the rear hub unit bearing. <Ref. to DS-23, INSPECTION, Rear Hub Unit Bearing.>                        |
| Abnormal tire wear                    | Improperly inflated tire. | Adjust the tire pressure.   |
|                                       | Improper wheel balancing  | Check the wheel balance. <Ref. to WT-8, ADJUSTMENT, Wheel Balancing.>                                       |
|                                       | Front wheel alignment     | Check the front wheel alignment. <Ref. to FS-6, INSPECTION, Wheel Alignment.>                               |
|                                       | Rear wheel alignment      | Check the rear wheel alignment. <Ref. to RS-7, INSPECTION, Wheel Alignment.>                                |