



## 11. Radiator Fan Control Unit

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the air intake duct. <Ref. to IN(H6DO)-7, REMOVAL, Air Intake Duct.>
- 3) Remove the front upper cover.

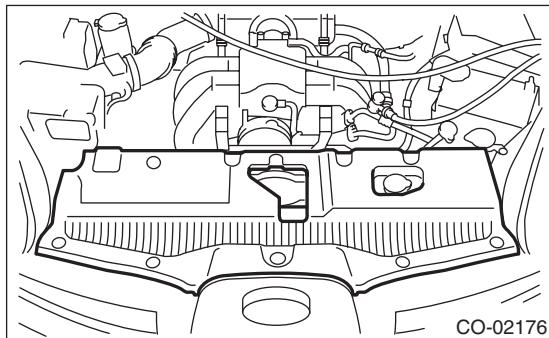

- 4) Remove the radiator fan control unit.
  - (1) Disconnect the connector from radiator fan control unit.
  - (2) Remove the screws which hold the radiator fan control unit.

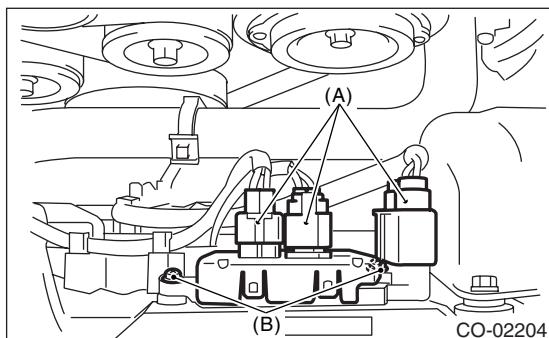

(A) Connector  
(B) Screw

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

***2.6 N·m (0.27 kgf·m, 1.9 ft-lb)***