

### 9. Radiator Sub Fan and Fan Motor

#### A: REMOVAL


Refer to the radiator main fan & fan motor. <Ref. to CO(H6DO)-21, REMOVAL, Radiator Main Fan and Fan Motor.>

#### B: INSTALLATION

Refer to the radiator main fan & fan motor. <Ref. to CO(H6DO)-22, INSTALLATION, Radiator Main Fan and Fan Motor.>


#### C: DISASSEMBLY

- 1) Disconnect the connector from radiator fan control unit.

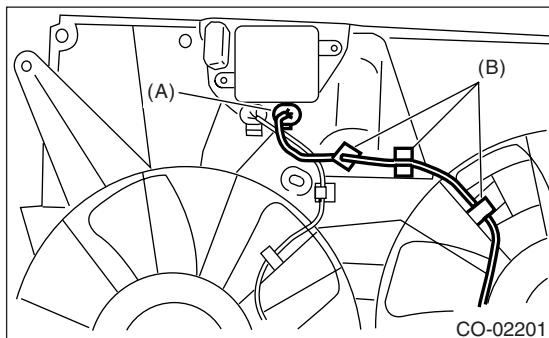


(A) Connector  
(B) Clip

- 2) Remove the radiator sub fan.

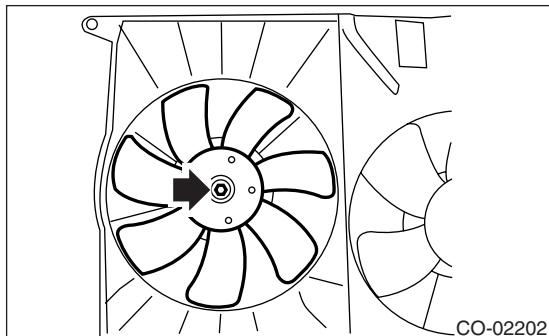

- 3) Remove the radiator sub fan motor.

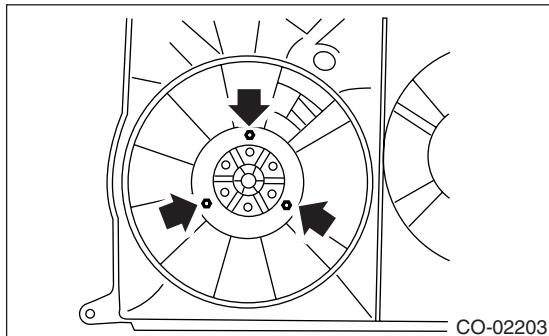


#### D: ASSEMBLY

Assemble in the reverse order of disassembly.

##### Tightening torque:

$3.8 \text{ N}\cdot\text{m} (0.39 \text{ kgf}\cdot\text{m}, 2.8 \text{ ft-lb})$

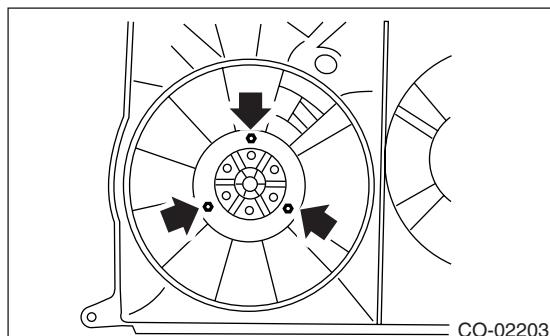

##### Tightening torque:

$6.3 \text{ N}\cdot\text{m} (0.64 \text{ kgf}\cdot\text{m}, 4.6 \text{ ft-lb})$

