



4. Canister

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift-up the vehicle.
- 3) Remove the clip holding the harness.

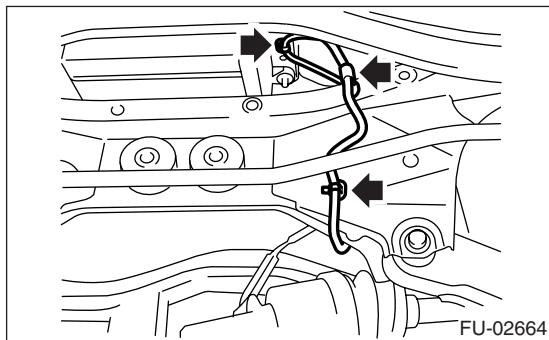


- 4) Remove the rear suspension assembly. <Ref. to RS-16, REMOVAL, Rear Sub Frame.>
- 5) Disconnect the following hoses and connectors.
 - (1) Evaporation hose
 - (2) Connector

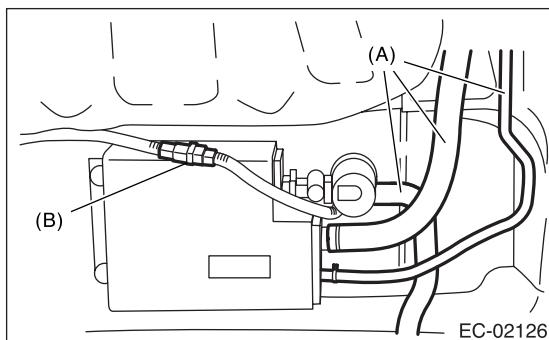

(A) Evaporation hose
(B) Connector

- 6) Remove the canister from body.

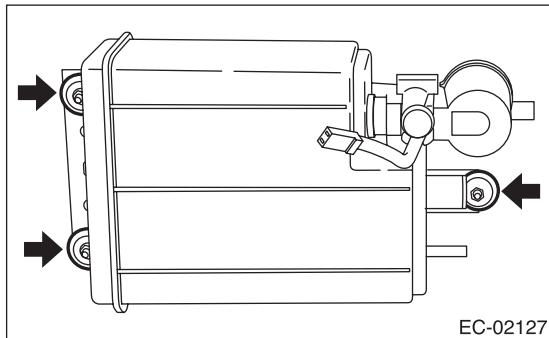


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

8.0 N·m (0.82 kgf·m, 5.9 ft-lb)

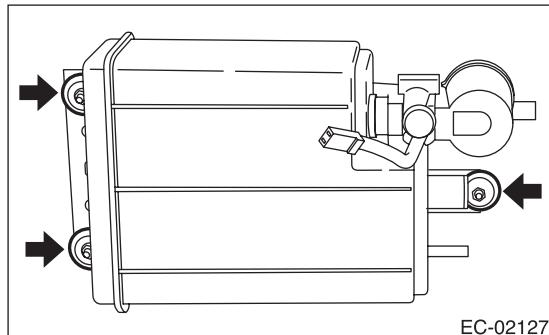

C: INSPECTION

Make sure the canister and canister hoses are not cracked or loose.