



12.PCV Valve

A: REMOVAL

1) Disconnect the PCV hose.

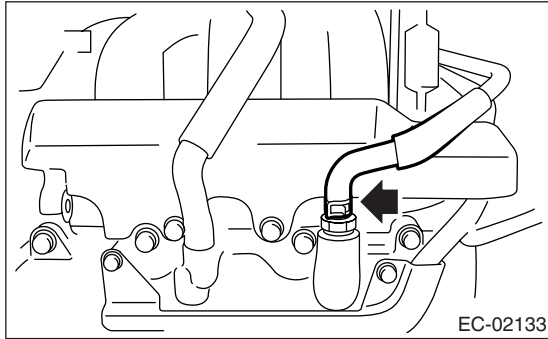

2) Remove the PCV valve from rocker cover.

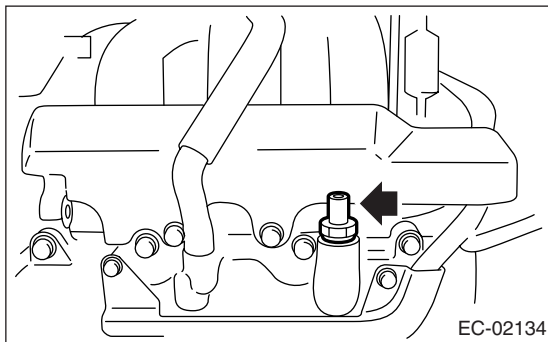

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Apply liquid gasket to the bolt threads of PCV valve.

Liquid gasket:

THREE BOND 1105 (Part No.004403010)

Tightening torque:

25 N·m (2.5 kgf-m, 18 ft-lb)

PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)
