


## General Description

## EXHAUST

## 1. General Description

## A: COMPONENT

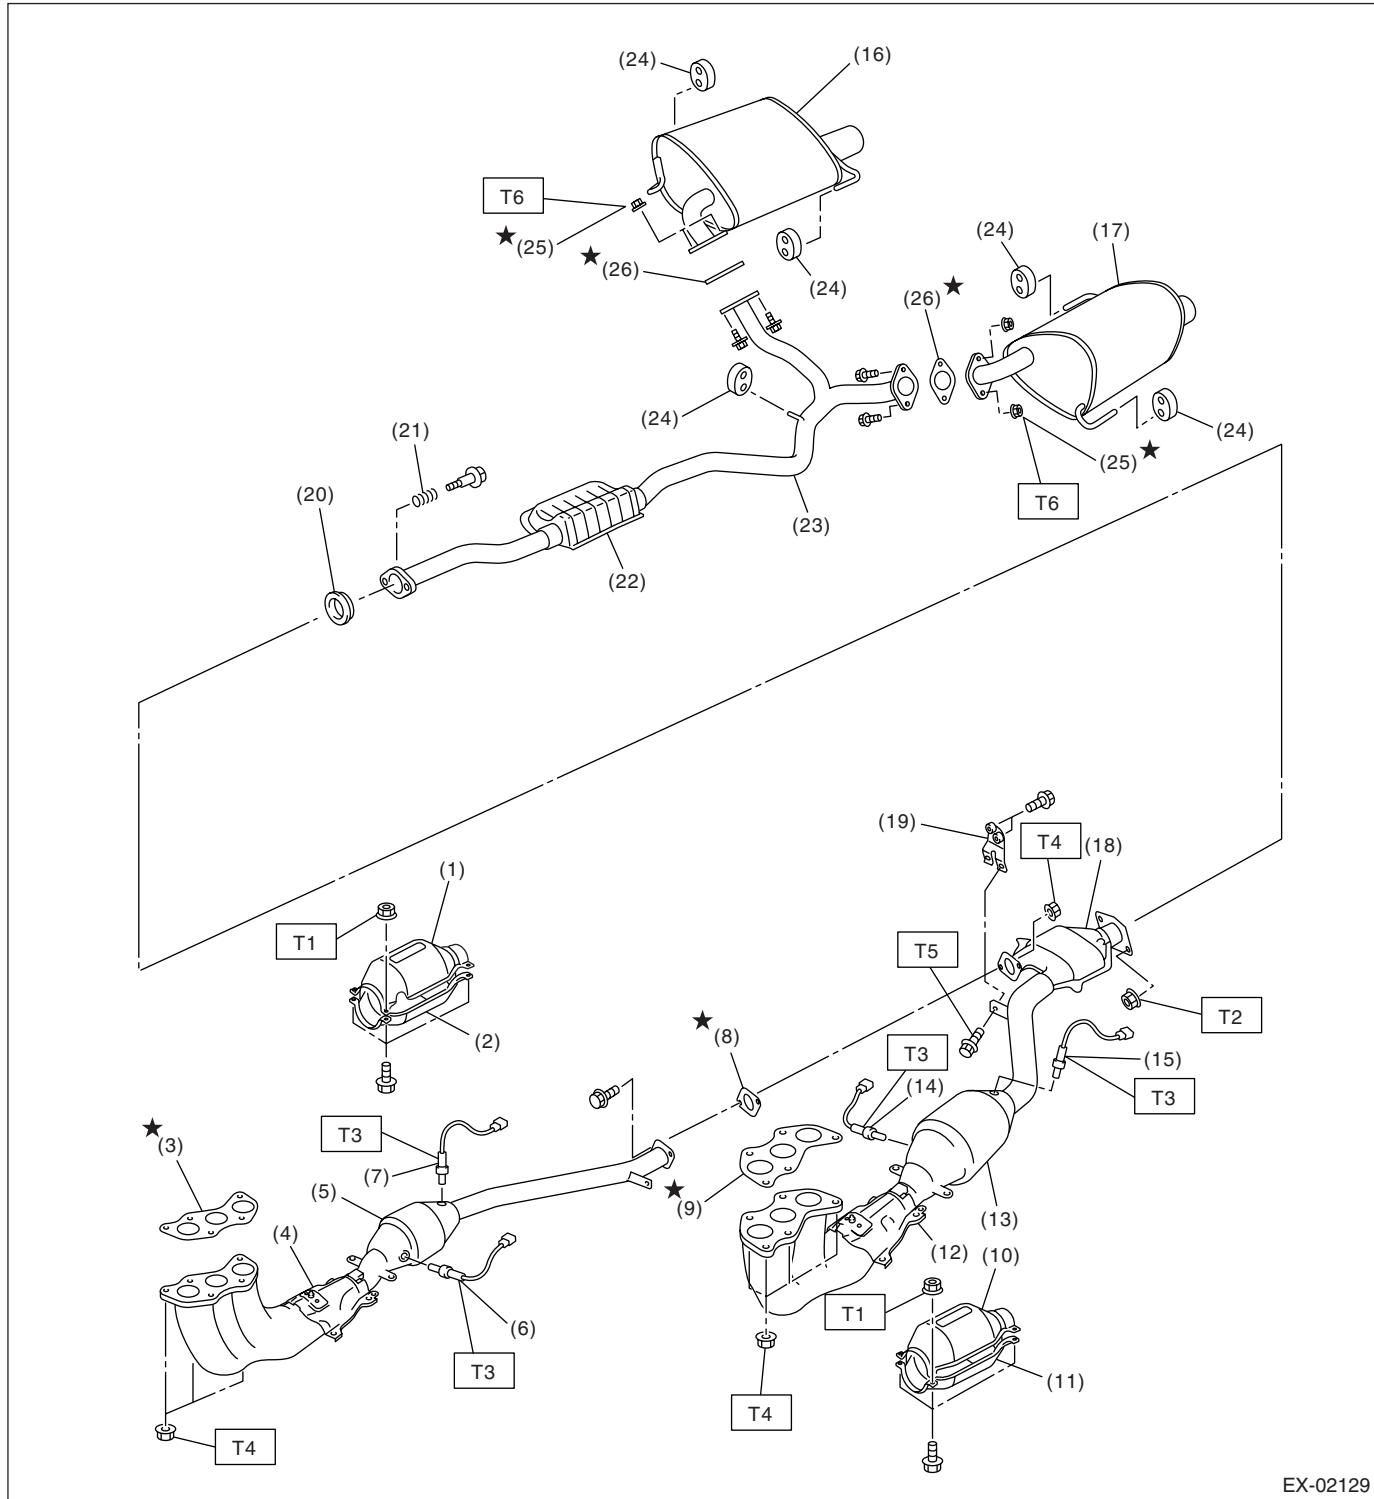

EX-02129

|   |   |  |
|---|---|--|
| (1) Front catalytic converter upper cover (RH)  | (11) Front catalytic converter lower cover (LH) | (23) Rear exhaust pipe                       |
| (2) Front catalytic converter lower cover (RH)  | (12) Front exhaust pipe (LH)                    | (24) Cushion rubber                          |
| (3) Gasket                                      | (13) Front catalytic converter (LH)             | (25) Self-locking nut                        |
| (4) Front exhaust pipe (RH)                     | (14) Front oxygen (A/F) sensor (LH)             | (26) Gasket                                  |
| (5) Front catalytic converter (RH)              | (15) Rear oxygen sensor (LH)                    |  |
| (6) Front oxygen (A/F) sensor (RH)              | (16) Muffler (RH)                               | <b>Tightening torque: N·m (kgf·m, ft·lb)</b> |
| (7) Rear oxygen sensor (RH)                     | (17) Muffler (LH)                               | <b>T1: 13 (1.3, 9.4)</b>                     |
| (8) Gasket                                      | (18) Rear catalytic converter                   | <b>T2: 18 (1.8, 13.0)</b>                    |
| (9) Gasket                                      | (19) Bracket                                    | <b>T3: 21 (2.1, 15.2)</b>                    |
| (10) Front catalytic converter upper cover (LH) | (20) Gasket                                     | <b>T4: 30 (3.1, 22.4)</b>                    |
|   | (21) Spring                                     | <b>T5: 35 (3.6, 26.0)</b>                    |
|   | (22) Chamber                                    | <b>T6: 48 (4.9, 35.4)</b>                    |

## B: CAUTION

- Wear work clothing, including a cap, protective goggles and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Be careful not to burn yourself, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.