

EXHAUST


3. Rear Exhaust Pipe

A: REMOVAL

1) Separate the rear exhaust pipe from front exhaust pipe.


CAUTION:

Be careful, exhaust pipe is hot.

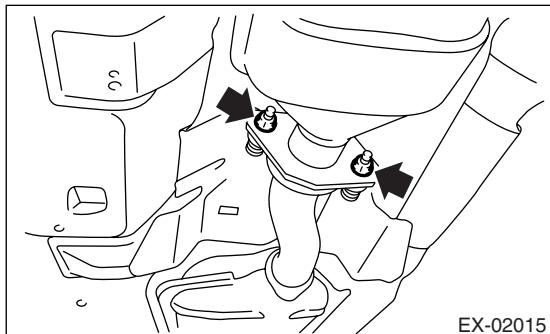

3) Apply a coat of spray type lubricant to the mating area of cushion rubber.

4) Remove the rear exhaust pipe bracket from cushion rubber.

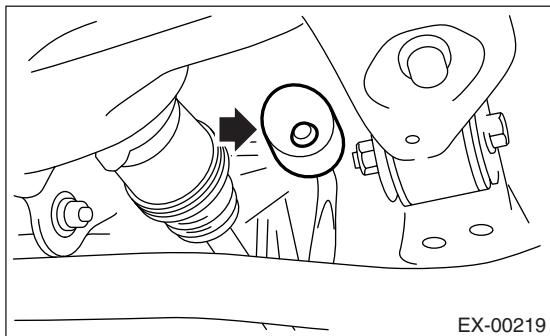


2) Separate the rear exhaust pipe from muffler.


CAUTION:

Be careful not to pull down the rear exhaust pipe.

- LH side

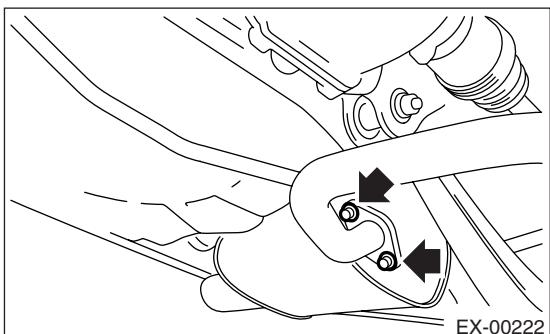


- RH side

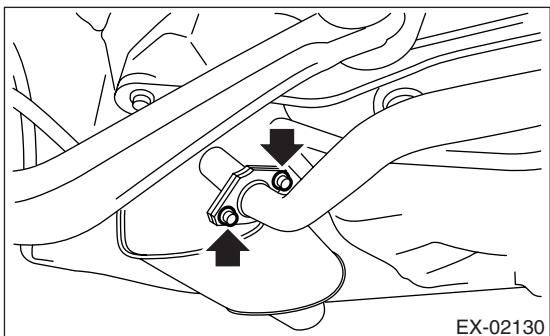

B: INSTALLATION

- 1) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 2) Install the rear exhaust pipe bracket to cushion rubber.

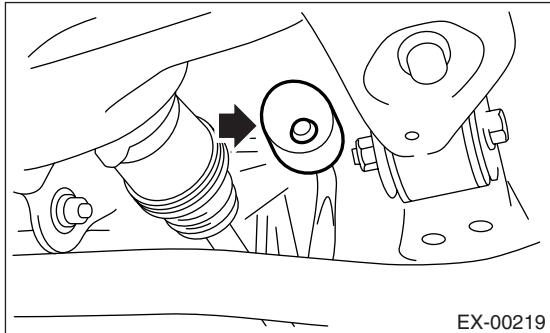

EX-00219

- 3) Install the rear exhaust pipe to muffler.


NOTE:

Use a new gasket and self-locking nut.

Tightening torque:


48 N·m (2.5 kgf·m, 35.4 ft-lb)

- LH side

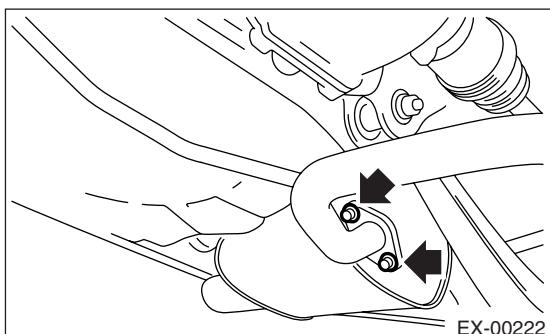

EX-00222

- RH side

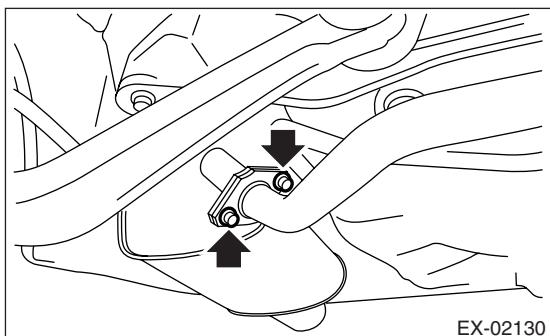

EX-02130

- 4) Install the rear exhaust pipe to center exhaust pipe.

Tightening torque:

18 N·m (2.5 kgf·m, 13.0 ft-lb)



EX-02015

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.