



## 16. Engine Control Module (ECM)

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front pillar lower trim and console side panel lower RH of passenger's side.
- 3) Detach the floor mat of passenger's seat.
- 4) Remove the protect cover.

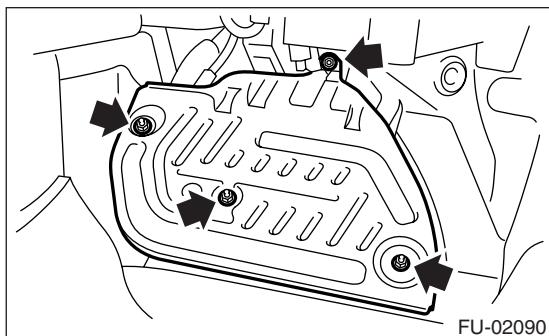

- 5) Remove the nuts which hold the ECM to the bracket.
- 6) Remove the clip (A) from bracket.

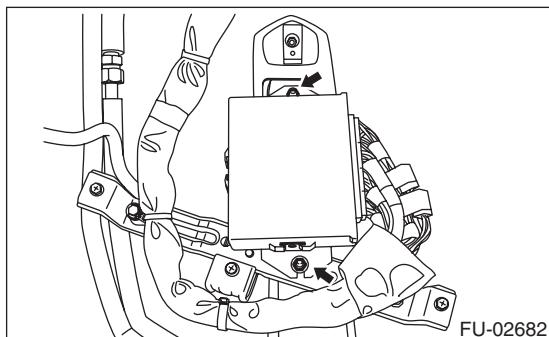

### B: INSTALLATION

Install in the reverse order of removal.

#### CAUTION:

- When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage on the fuel injection system.
- When replacing the ECM, be careful not to damage the harnesses and connectors.
- When replacing the ECM, immobilizer system must be registered. To do so, all ignition keys and ID cards need to be prepared. Refer to the "IMMOBILIZER TEACHING OPERATION MANUAL".

#### *Tightening torque:*

5 N·m (0.5 kgf·m, 3.6 ft-lb)