


11. Fuel Injector


A: REMOVAL

1. RH SIDE


- 1) Remove the collector cover.
- 2) Release the fuel pressure. <Ref. to FU(H6DO)-37, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 3) Disconnect the ground cable from battery.
- 4) Open the fuel filler flap lid, and remove the fuel filler cap.
- 5) Remove the air cleaner case. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.>
- 6) Remove the fuel pipe protector RH.

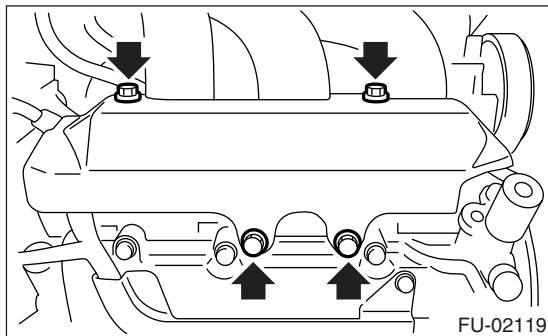

- 7) Disconnect the connector from fuel injector.

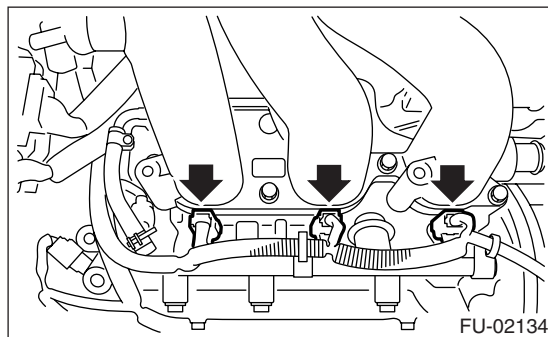


- 8) Remove the engine harness from fuel injector pipe RH.
- 9) Remove the bolt which holds fuel injector pipe onto intake manifold.

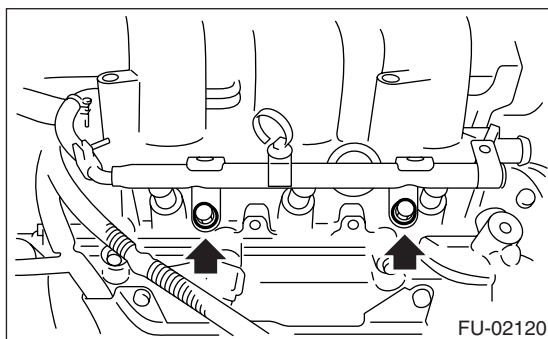


- 10) Remove the fuel injector while lifting up the fuel injector pipe.

2. LH SIDE


- 1) Remove the collector cover.
- 2) Release the fuel pressure. <Ref. to FU(H6DO)-37, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 3) Remove the battery.
- 4) Open the fuel filler flap lid, and remove the fuel filler cap.
- 5) Remove the generator harness from fuel pipe protector LH.
- 6) Remove the fuel pipe protector LH.

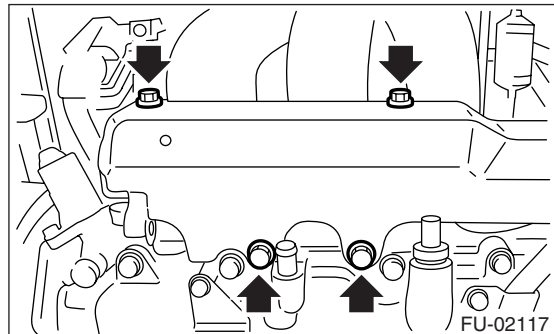

- 7) Disconnect the connector from fuel injector.

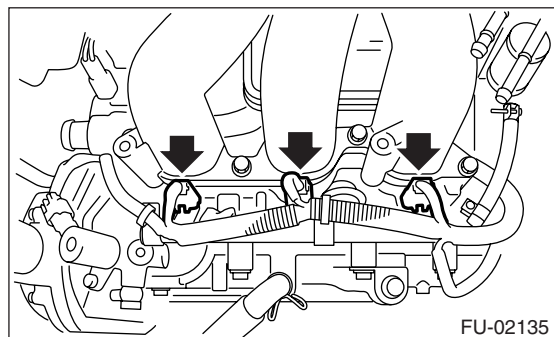

- 8) Remove the engine harness from fuel injector pipe LH.
- 9) Remove the bolt which holds fuel injector pipe onto intake manifold.

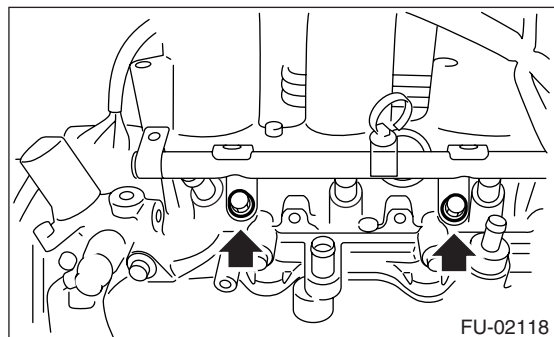

- 10) Remove the fuel injector while lifting up the fuel injector pipe.

B: INSTALLATION

1. RH SIDE


Install in the reverse order of removal.

NOTE:

Use new O-rings.


Tightening torque:

19 N·m (1.9 kgf-m, 14 ft-lb)

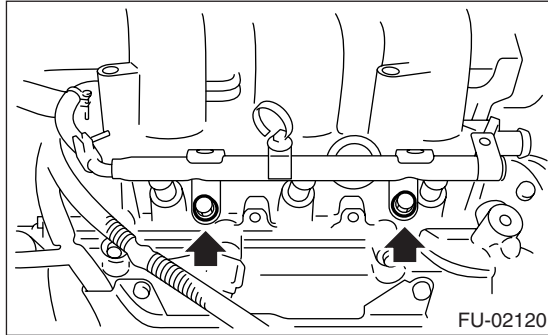

Tightening torque:

19 N·m (1.9 kgf-m, 14 ft-lb)

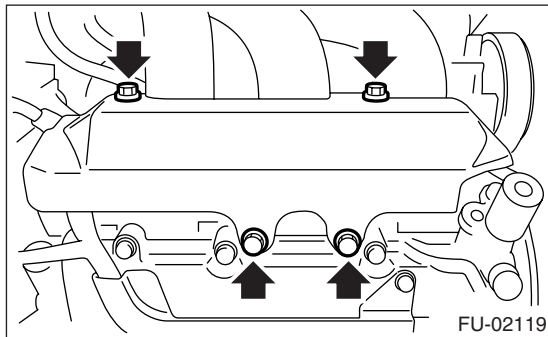

2. LH SIDE


Install in the reverse order of removal.

NOTE:

Use new O-rings.

Tightening torque:

19 N·m (1.9 kgf-m, 14 ft-lb)

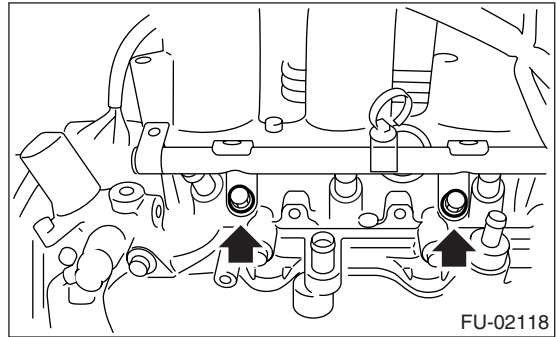

Tightening torque:

19 N·m (1.9 kgf-m, 14 ft-lb)

