


26. Fuel Sub Level Sensor

A: REMOVAL


WARNING:

- Place "NO FIRE" signs near the working area.
- Be careful not to spill fuel on the floor.


- 1) Drain fuel. <Ref. to FU(H6DO)-37, DRAINING FUEL, PROCEDURE, Fuel.>
- 2) Remove the second seat. <Ref. to SE-12, REMOVAL, Second-row Seats.>
- 3) Remove the service hole cover.

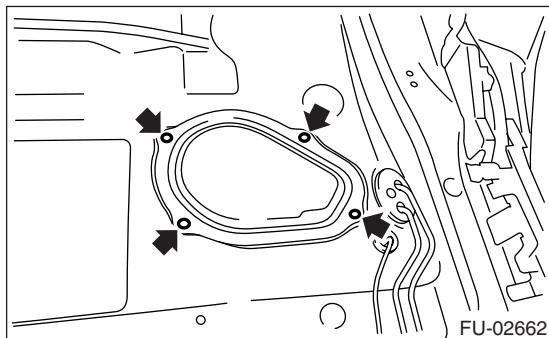

- 4) Disconnect the connector from the fuel sub level sensor.

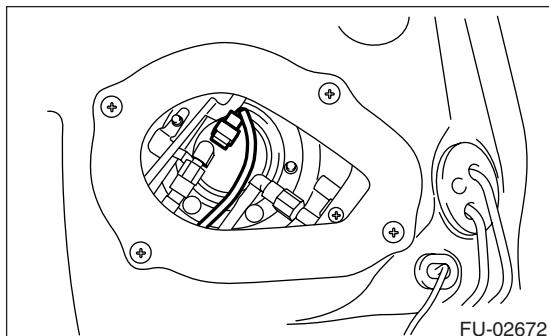

- 5) Disconnect the quick connector, and then disconnect the fuel delivery hose, return hose and jet pump hose. <Ref. to FU(H6DO)-48, REMOVAL, Fuel Delivery, Return and Evaporation Lines.>
- 6) Remove the nuts and bolts which install fuel sub level sensor on fuel tank.

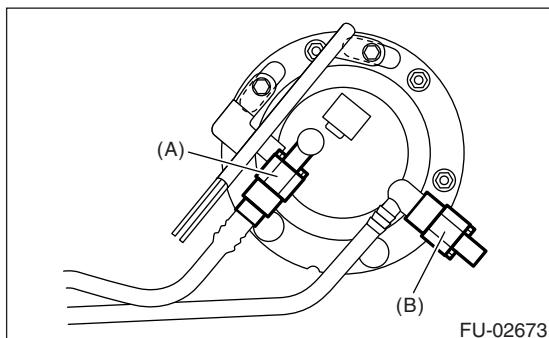

(A) Jet pump hose
 (B) Delivery hose

- 7) Remove the fuel sub level sensor.

B: INSTALLATION

Install in the reverse order of removal.



NOTE:

Use a new gasket.

1. Make sure the sealing portion is free from fuel or foreign matter before installation.
2. Tighten the nuts and bolts to the specified torque in the order as shown in the figure.

Tightening torque:

4.4 N·m (0.45 kgf·m, 3.2 ft-lb)

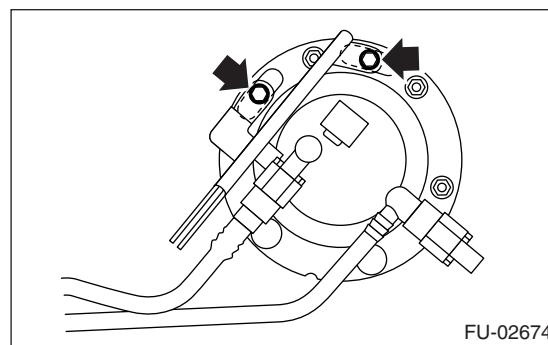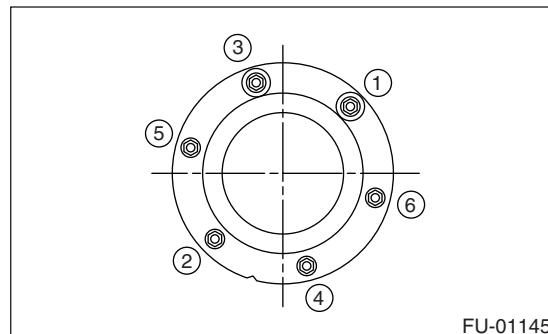

FU-01145

FU-02674