


3. Intake Manifold


A: REMOVAL

- 1) Remove the collector cover.
- 2) Release the fuel pressure. <Ref. to FU(H6DO)-37, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 3) Disconnect the ground cable from battery.
- 4) Open the fuel filler flap lid, and remove the fuel filler cap.
- 5) Remove the air cleaner case and air intake chamber. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.> <Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>
- 6) Remove the generator. <Ref. to SC(H6DO)-19, REMOVAL, Generator.>
- 7) Disconnect the connector from throttle body.

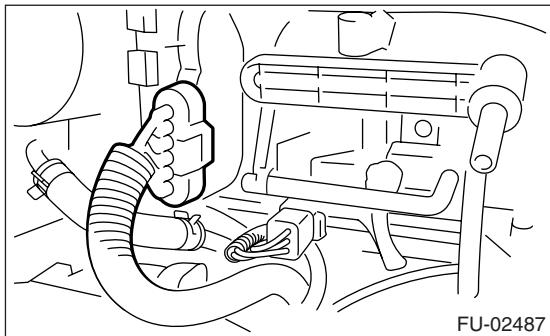


FU-02487

- 8) Disconnect the engine coolant hoses from throttle body.

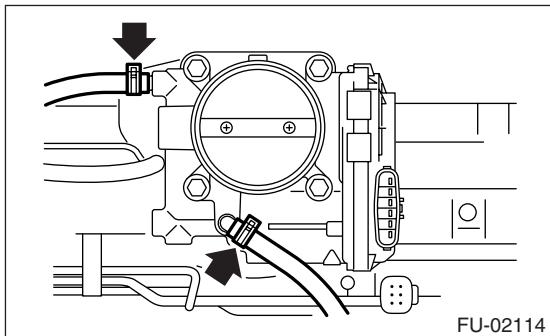


FU-02114

- 9) Disconnect the PCV hose.

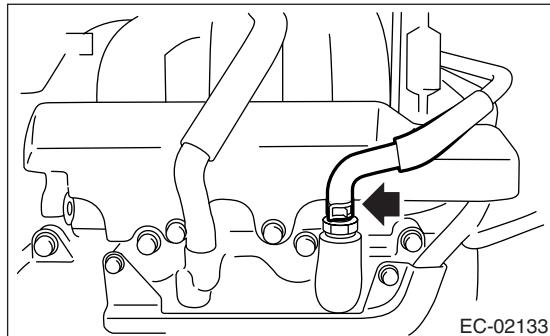

EC-02133

- 10) Disconnect the brake booster hose.

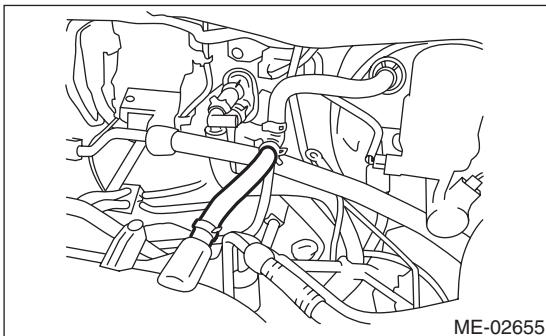

ME-02655

- 11) Disconnect the fuel hoses from fuel pipe.


(1) Disconnect the connector of fuel pipe by pushing the ST in the direction of arrow.

ST 42099AE000 CONNECTOR REMOVER

(2) Remove the clip, and disconnect the evaporation hose from the pipe.


WARNING:

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

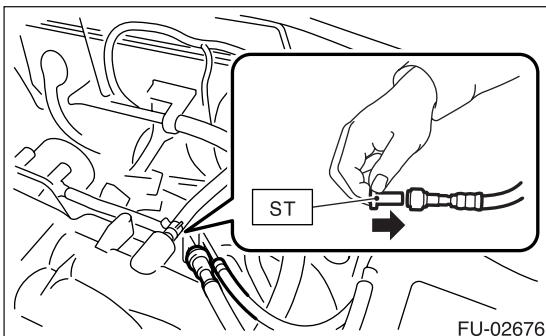

FU-02676


- 12) Remove the fuel pipe protector LH.

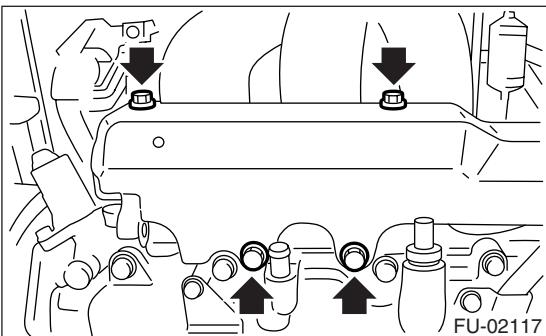

FU-02117


- 13) Remove the engine harness from fuel injector pipe LH.

14) Remove the bolts which hold fuel injector pipe LH to cylinder head.

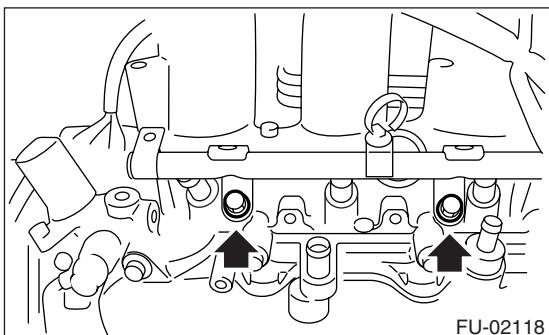

FU-02118


15) Remove the fuel pipe protector RH.

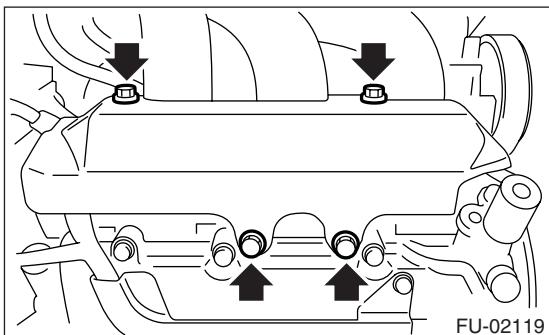

FU-02119

16) Remove the engine harness from fuel injector pipe RH.


17) Remove the bolts which hold the fuel injector pipe RH to the cylinder head.

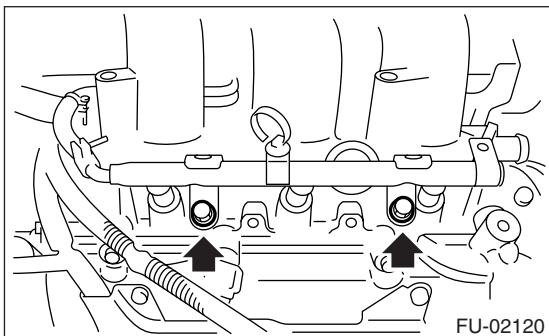

FU-02120


18) Remove the bolts which hold the intake manifold to the cylinder head.

- LH side

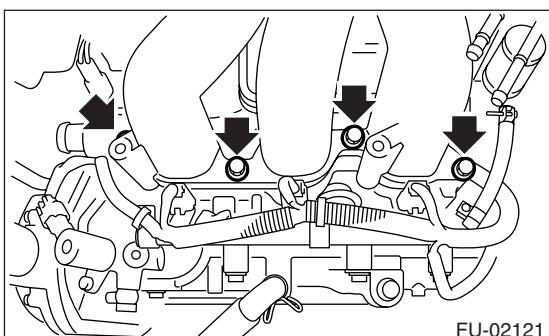

FU-02121

- RH side

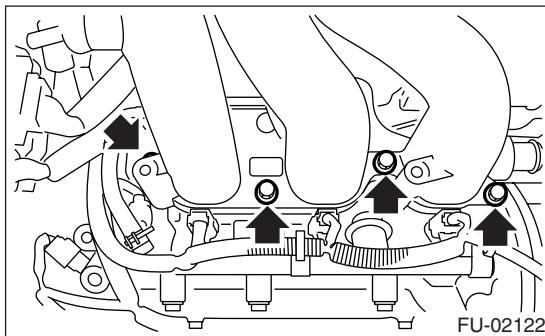

FU-02122

19) Remove the intake manifold.

B: INSTALLATION

1) Install the intake manifold onto cylinder heads.


NOTE:

Use new O-rings.

Tightening torque:


25 N·m (2.5 kgf·m, 18 ft·lb)

- RH side

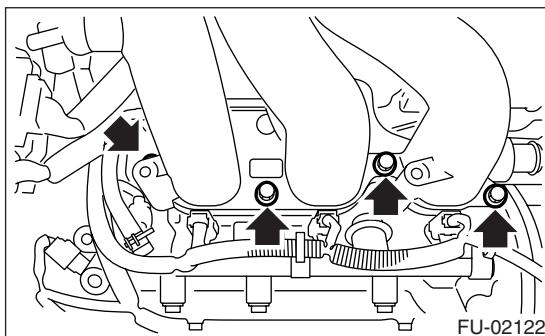

FU-02122

- LH side

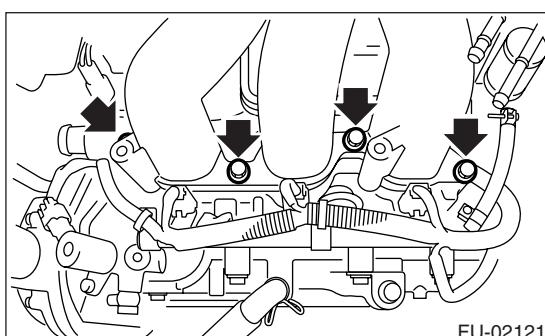

FU-02121


Intake Manifold

FUEL INJECTION (FUEL SYSTEMS)

2) Install the bolts which hold fuel injector pipe RH to cylinder head.

Tightening torque:

19 N·m (1.9 kgf-m, 14 ft-lb)

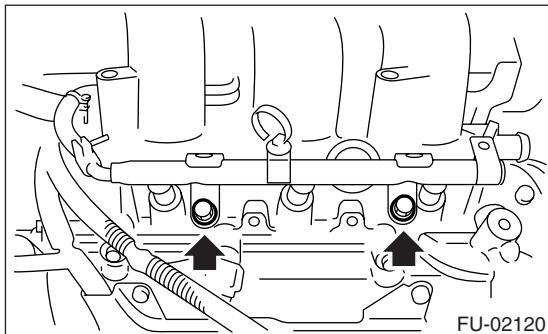


3) Install the engine harness to fuel injector pipe RH.

4) Install the fuel pipe protector RH.

Tightening torque:


19 N·m (1.9 kgf-m, 14 ft-lb)

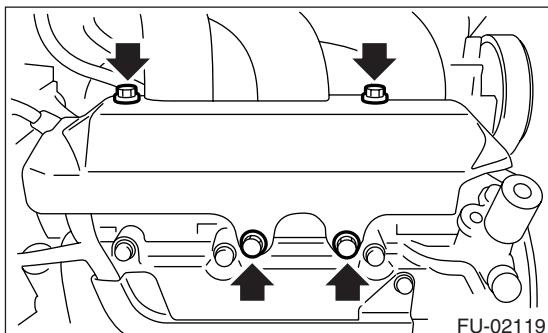

5) Install the bolts which hold fuel injector pipe LH to cylinder head.

Tightening torque:

19 N·m (1.9 kgf-m, 14 ft-lb)

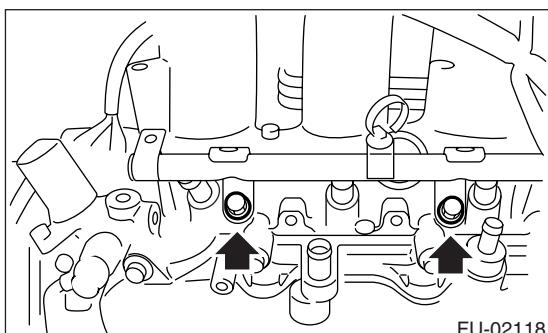


6) Install the engine harness to fuel injector pipe LH.


7) Install the fuel pipe protector LH.

Tightening torque:


19 N·m (1.9 kgf-m, 14 ft-lb)

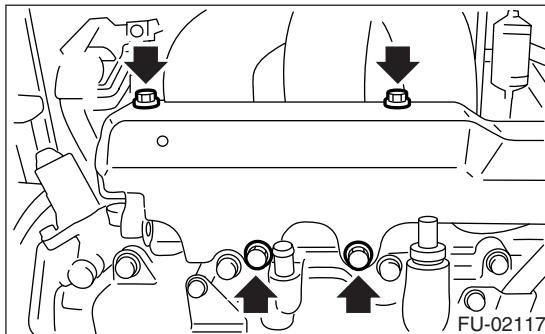


8) Connect the fuel hoses to fuel pipe.

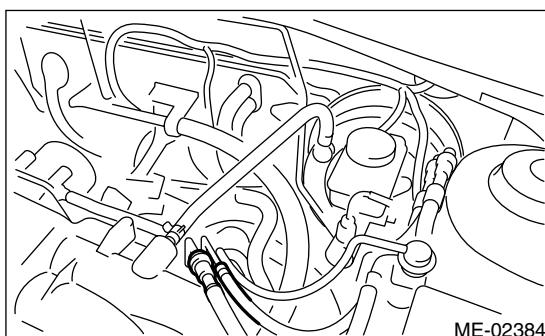


9) Connect the brake booster hose.

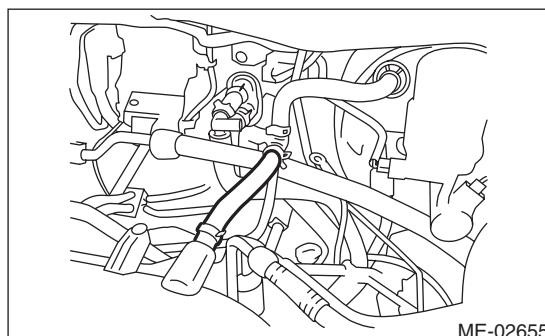


10) Connect the PCV hose.

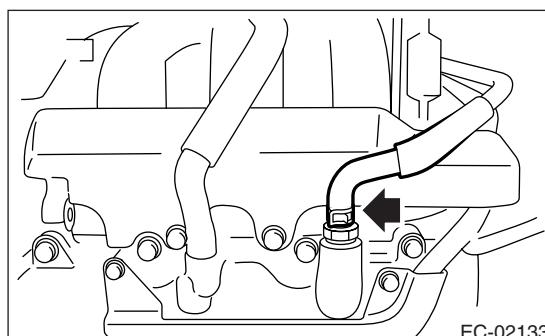

11) Connect the engine coolant hoses to throttle body.

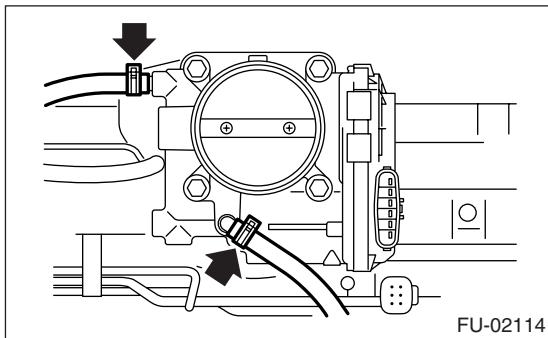


12) Connect the connector to throttle body.

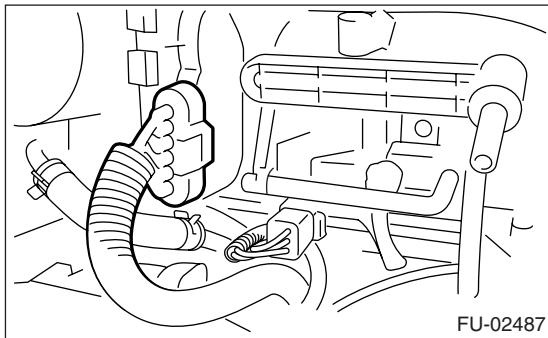



13) Install the generator. <Ref. to SC(H6DO)-19, INSTALLATION, Generator.>
 14) Install the air cleaner case and air intake chamber. <Ref. to IN(H6DO)-5, INSTALLATION, Air Cleaner Case.> <Ref. to IN(H6DO)-6, INSTALLATION, Air Intake Chamber.>
 15) Install the fuse of fuel pump to main fuse box.
 16) Connect the ground cable to the battery.
 17) Install the collector cover.

C: DISASSEMBLY

- 1) Remove the engine harness from intake manifold.
- 2) Remove the throttle body. <Ref. to FU(H6DO)-11, REMOVAL, Throttle Body.>
- 3) Remove the manifold absolute pressure sensor. <Ref. to FU(H6DO)-22, REMOVAL, Manifold Absolute Pressure Sensor.>
- 4) Remove the purge control solenoid valve. <Ref. to EC(H6DO)-6, REMOVAL, Purge Control Solenoid Valve.>
- 5) Loosen the clamp which holds fuel injector pipe to fuel hose, and then disconnect the pipe from fuel hose.

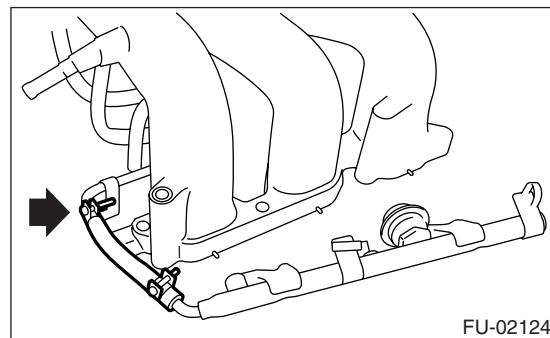

6) Remove the bolts which install fuel pipes on intake manifold.

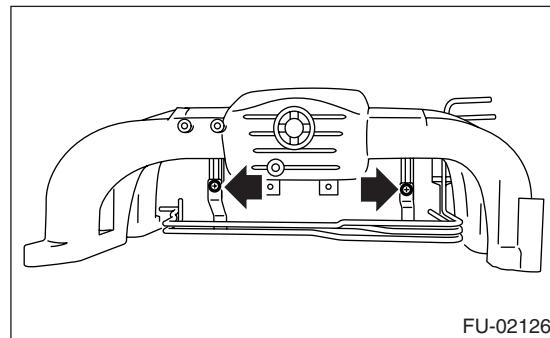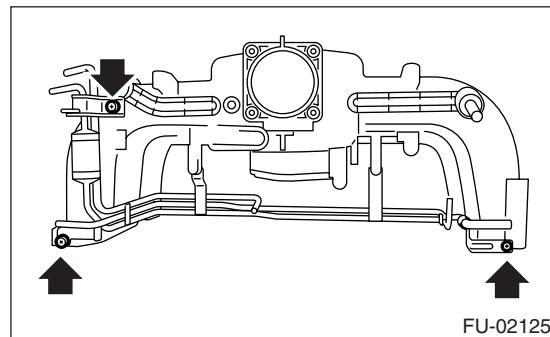

Intake Manifold

FUEL INJECTION (FUEL SYSTEMS)

D: ASSEMBLY

NOTE:

When assembling the nipple, apply liquid gasket.



Liquid gasket:

THREE BOND 1105 (Part No.004403010)

- 1) Tighten the bolts which install fuel pipes on intake manifold.

Tightening torque:


6.4 N·m (0.65 kgf·m, 4.7 ft-lb)

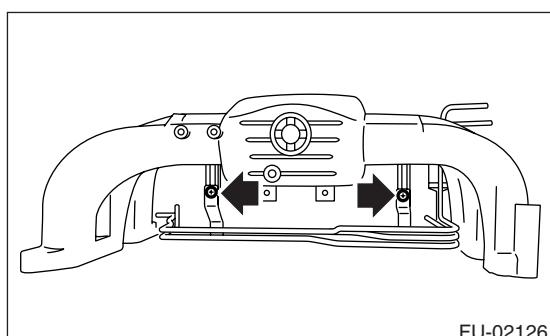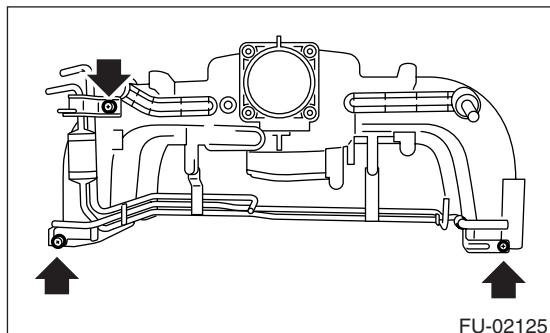

- 2) Connect the fuel injector pipe to fuel hose, and tighten the clamp screw.

Tightening torque:

1.5 N·m (0.15 kgf·m, 1.1 ft-lb)

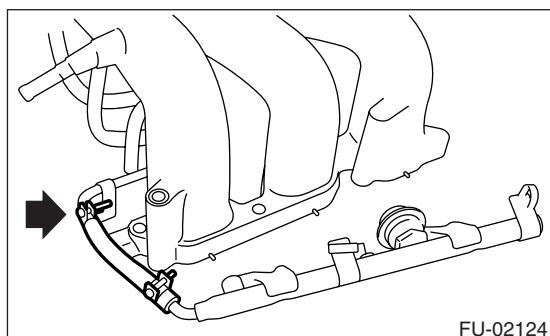

- 3) Install the purge control solenoid valve. <Ref. to EC(H6DO)-6, INSTALLATION, Purge Control Solenoid Valve.>

- 4) Install the manifold absolute pressure sensor. <Ref. to FU(H6DO)-22, INSTALLATION, Manifold Absolute Pressure Sensor.>

- 5) Install the throttle body to intake manifold. <Ref. to FU(H6DO)-11, INSTALLATION, Throttle Body.>

- 6) Install the engine harness to the intake manifold.

E: INSPECTION

Make sure the fuel pipe and fuel hoses are not damaged and the connections are tightened firmly.