

## General Description

### IGNITION


---

## 1. General Description

### A: SPECIFICATION

Item		Specification
Ignition coil & ignitor ASSY	Type	FK0140
	Ignition system	Independent ignition coil
	Manufacturer	Diamond Electric
Spark plug	Manufacturer and type	NGK: ILFR6B
	Thread size (diameter, pitch, length) mm	14, 1.25, 26.5
	Spark plug gap mm (in)	0.7 — 0.8 (0.028 — 0.031)
	Electrode	Iridium

## B: COMPONENT

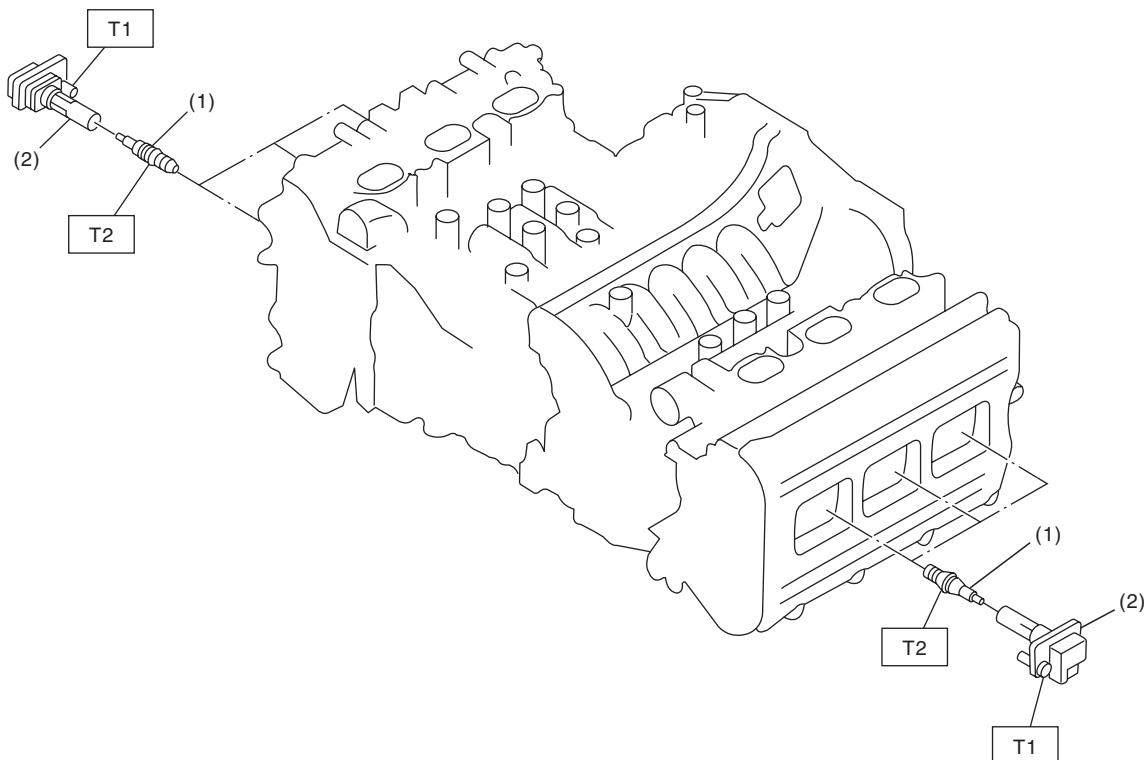

IG-00052

- (1) Spark plug
- (2) Ignition coil & ignitor ASSY

**Tightening torque: N·m (kgf·m, ft-lb)**

**T1: 16 (1.6, 11.7)**

**T2: 21 (2.1, 15.2)**

## C: CAUTION

- Wear work clothing, including a cap, protective goggles and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Be careful not to burn yourself, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.