


General Description

INTAKE (INDUCTION)

1. General Description

A: COMPONENT

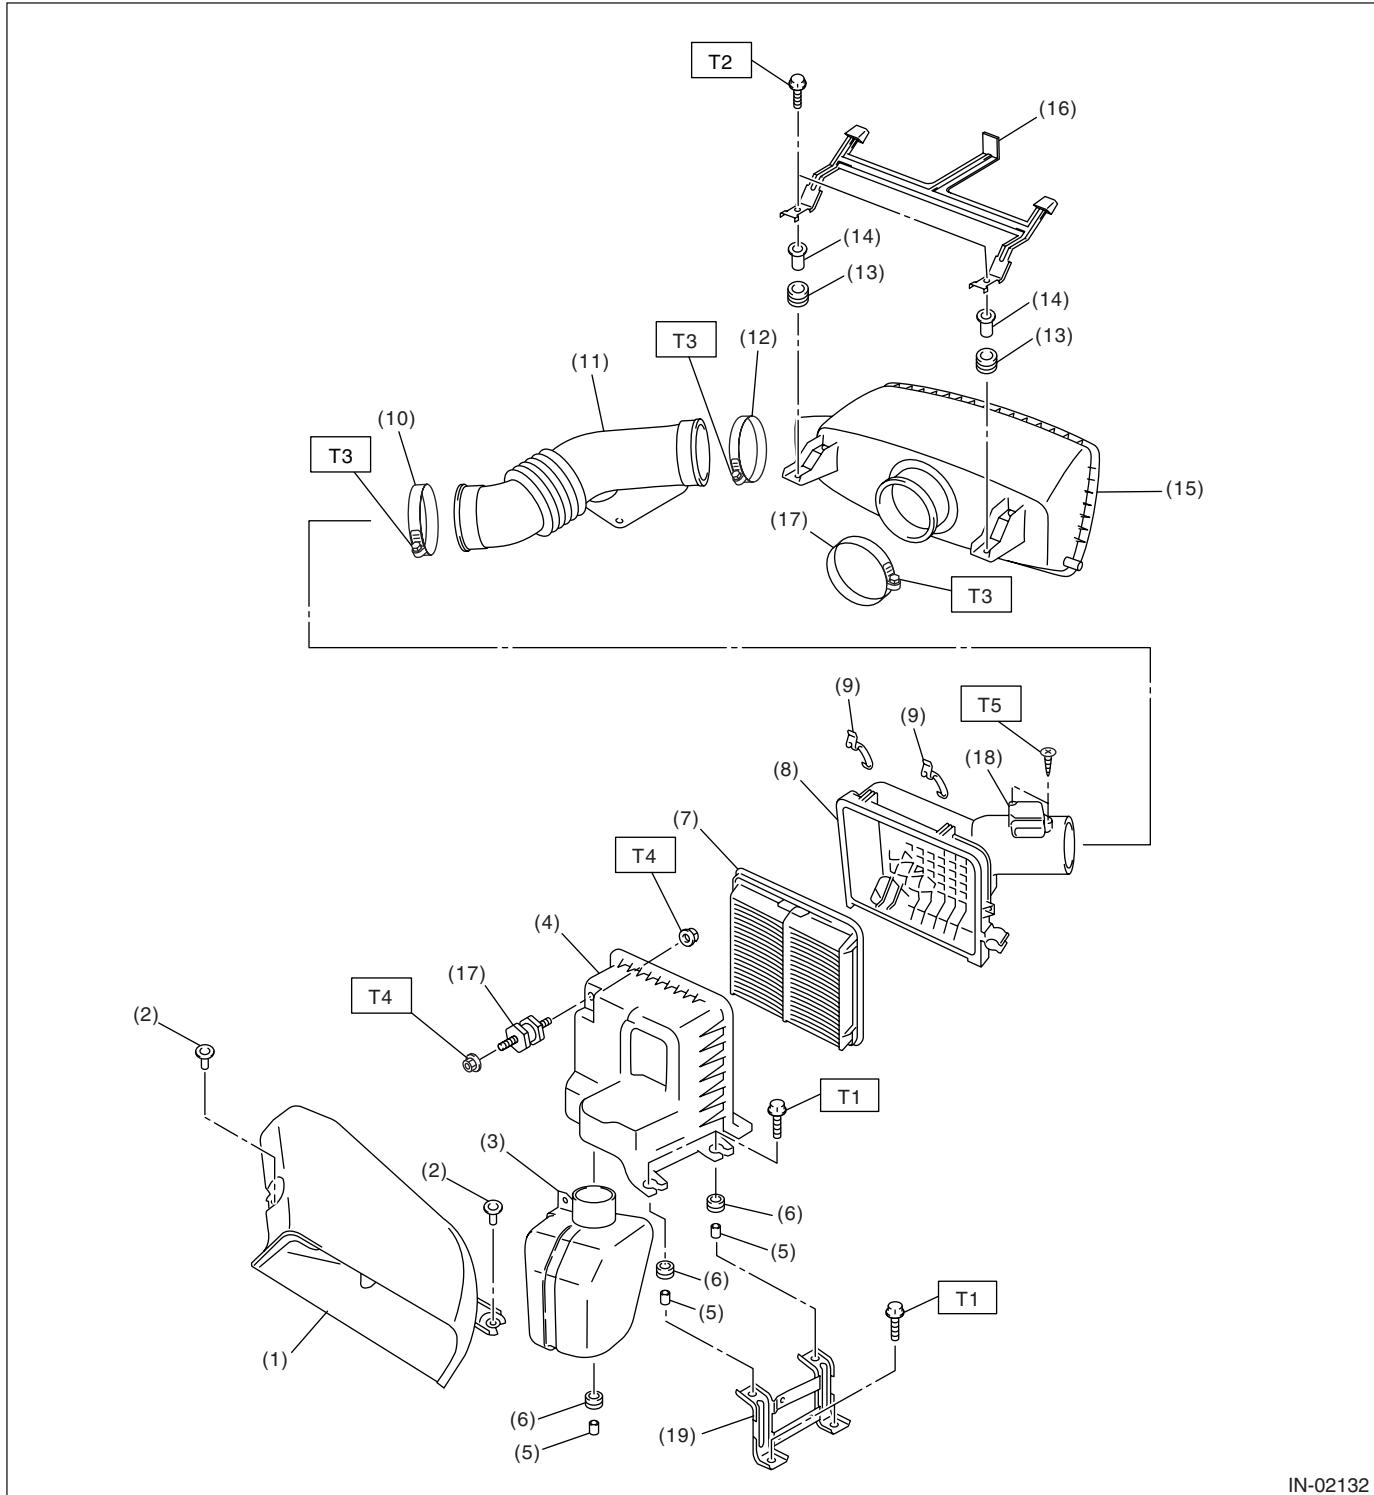

IN-02132

General Description

INTAKE (INDUCTION)

(1) Air intake duct	(11) Intake duct	(19) Air cleaner bracket
(2) Clip	(12) Clamp	
(3) Resonator chamber	(13) Cushion	
(4) Air cleaner case (front)	(14) Spacer	
(5) Spacer	(15) Air intake chamber	
(6) Cushion	(16) Collector cover bracket	
(7) Air cleaner element	(17) Cushion	
(8) Air cleaner case (rear)	(18) Mass air flow and intake air temperature sensor	
(9) Clip		
(10) Clamp		

Tightening torque: N·m (kgf·m, ft·lb)

T1: 6.0 (0.6, 4.4)

T2: 6.4 (0.65, 4.7)

T3: 3.0 (0.3, 2.2)

T4: 7.5 (0.76, 5.5)

T5: 1.0 (0.10, 0.7)

B: CAUTION

- Wear work clothing, including a cap, protective goggles and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Be careful not to burn yourself, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.