

26. Connecting Rod

A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of connecting rod.

<Ref. to ME(H6DO)-62, REMOVAL, Cylinder Block.> <Ref. to ME(H6DO)-64, INSTALLATION, Cylinder Block.>