

## 22.Oil Flow Control Solenoid Valve

### A: REMOVAL

Oil flow control solenoid valve is a unit with cam-shaft cap.

Refer to "Camshaft" for removal.

<Ref. to ME(H6DO)-53, REMOVAL, Camshaft.>

### B: INSTALLATION

Install in the reverse order of removal.