


8. Air Cleaner Element

A: REPLACEMENT

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips (B) on air cleaner case.

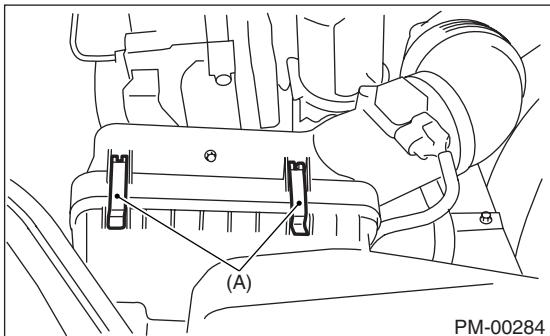

- 3) While pushing the duct toward the back end of the vehicle, remove the air cleaner element.



- 4) Install in the reverse order of removal.

NOTE:

Fasten with a clip after inserting the lower tab of case.