

Schedule

PERIODIC MAINTENANCE SERVICES

2. Schedule

A: MAINTENANCE SCHEDULE 1

		Maintenance interval [Number of months or km (miles), whichever occurs first]												Remarks
	Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	Continued in the table below.	Remarks
	× 1,000 km	4.8	12	24	36	48	60	72	81.4	96	108	120		
	× 1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75		
1	Engine oil	R	R	R	R	R	R	R	R	R	R	R		
2	Engine oil filter	R	R	R	R	R	R	R	R	R	R	R		
3	Spark plug					R				R				
4	Drive belt(s)					I				I				
6	Fuel line					(I)				(I)				Note (1)
7	Air cleaner element					R				R				Note (2)
8	Cooling system					I				I				
9	Engine coolant					R				R				
10	Automatic transmission fluid					I				I				Note (3)
11	Front & rear differential oil					I				I				
12	Brake line			I		I		I		I		I		
13	Brake fluid					R				R				
14	Disc brake pad and disc			I		I		I		I		I		
15	Parking brake			I		I		I		I		I		
16	Suspension			I		I		I		I		I		
17	Wheel bearing									(I)				
18	Axle boots and joints			I		I		I		I		I		
19	Tire rotation		I	I	I	I	I	I	I	I	I	I		Note (4)
20	Steering system (Power steering)			I		I		I		I		I		
21	SRS airbag system	Inspect every 10 years												
22	A/C filter	Replace every 24 months or 24,000 km (15,000 miles).												Note (5)

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

NOTE:

(1) This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.

(2) When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.

(3) ATF filter is maintenance free part. ATF filter needs replacement, when it has physically rust, damaged or ATF leaked.

(4) A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.8 mm (0.071 in) or less.

(5) When the A/C filter is mounted

Schedule

PERIODIC MAINTENANCE SERVICES

		Maintenance interval [Number of months or km (miles), whichever occurs first]											
	Months	Continued from the table above.	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	Remarks
	× 1,000 km		132	144	156	168	180	192	204	216	228	240	
	× 1,000 miles		82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	
1	Engine oil		R	R	R	R	R	R	R	R	R	R	
2	Engine oil filter		R	R	R	R	R	R	R	R	R	R	
3	Spark plug		R				R					R	
4	Drive belt(s)		I		R				I				
5	Camshaft drive belt		I		R				I				
6	Fuel line		(I)					I			(I)	Note (1)	
7	Air cleaner element		R				R				R	Note (2)	
8	Cooling system		I				I				I		
9	Engine coolant		R				R				R		
10	Automatic transmission fluid		I				I				I	Note (3)	
11	Front & rear differential oil		I				I				I		
12	Brake line		I		I		I		I		I		
13	Brake fluid		R				R				R		
14	Disc brake pad and disc		I		I		I		I		I		
15	Parking brake		I		I		I		I		I		
16	Suspension		I		I		I		I		I		
17	Wheel bearing						(I)				(I)		
18	Axle boots and joints		I		I		I		I		I		
19	Tire rotation	I	I	I	I	I	I	I	I	I	I	Note (4)	
20	Steering system (Power steering)		I		I		I		I		I		
21	SRS airbag system	Inspect every 10 years											
22	A/C filter	Replace every 24 months or 24,000 km (15,000 miles).										Note (5)	

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

NOTE:

- (1) This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.
- (2) When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
- (3) ATF filter is maintenance free part. ATF filter needs replacement, when it has physically rust, damaged or ATF leaked.
- (4) A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.8 mm (0.071 in) or less.
- (5) When the A/C filter is mounted

Schedule

PERIODIC MAINTENANCE SERVICES

B: MAINTENANCE SCHEDULE 2

Item	Maintenance interval	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Engine oil filter	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Fuel line	7.5 months				I		
	12,000 km						
	7,500 miles						
Automatic transmission fluid	15 months						R
	24,000 km						
	15,000 miles						
Front & rear differential oil	15 months						R
	24,000 km						
	15,000 miles						
Brake line	7.5 months				I		
	12,000 km						
	7,500 miles						
Brake fluid	15 months					R	
	24,000 km						
	15,000 miles						
Disc brake pad and disc	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Parking brake	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Suspension	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						
A axle boots and joints	7.5 months	I	I	I	I		I
	12,000 km						
	7,500 miles						
Steering system (Power steering)	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						