

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

56.Bulkhead Wiring Harness (In Engine Compartment)

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	Black	B-2		Air flow sensor
B6	2	Gray	B-2		Front ABS wheel speed sensor RH
B8	5	Black	B-4		Front wiper motor
B10	4	Gray	B-4		Pressure switch
B11	20	Gray	B-3	T4	Transmission
B12	8	Brown	B-3	T3	
B14	1	Black	B-3		Starter (Magnet)
B15	2	Gray	B-4		Front ABS wheel speed sensor LH
B16	2	Gray	B-4		Brake fluid level switch
B20	16	Brown	B-3	E1	Engine wiring harness
B21	54	Black	B-3	E2	
B22	16	Brown	B-3	E3	
B143	20	★	B-4		Main fuse box (M/B)
B144	9	Brown	B-4		
B145	7	Brown	B-4		
B146	6	Gray	C-4		Washer motor & washer tank
B186	8	★	B-4		Main fuse box (M/B)
B310	46	Black	B-2		VDC control module
B360	16	Gray	C-4	F109	Through joint connector
B361	14	Gray	B-4	F108	
B407	2	Black	B-5		Paddle light LH
B409	4	Black	B-5		Wiper relay unit
B410	3	Gray	B-5		
B411	3	Black	B-4		Pressure sensor
B417	2	Gray	C-3		Vacuum pump
B422	4	Black	B-3		Vacuum pump relay
B423	8	Black	B-3		Relay box
B430	2	Black	B-2		Paddle light RH
B432	8	Black	B-4		SBF holder
B433	2	★	B-4		Main fuse box (M/B)


★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Yellow	C-3		Front sub sensor LH
AB16	2	Yellow	C-1		Front sub sensor RH

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
E3	16	Brown	A-3	B22	Bulkhead wiring harness
E24	4	Light gray	C-3		Front oxygen (A/F) sensor LH
E25	4	Dark gray	B-4		Rear oxygen sensor LH
E47	4	Light gray	C-3		Front oxygen (A/F) sensor RH
E61	4	Dark gray	C-3		Rear oxygen sensor RH

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

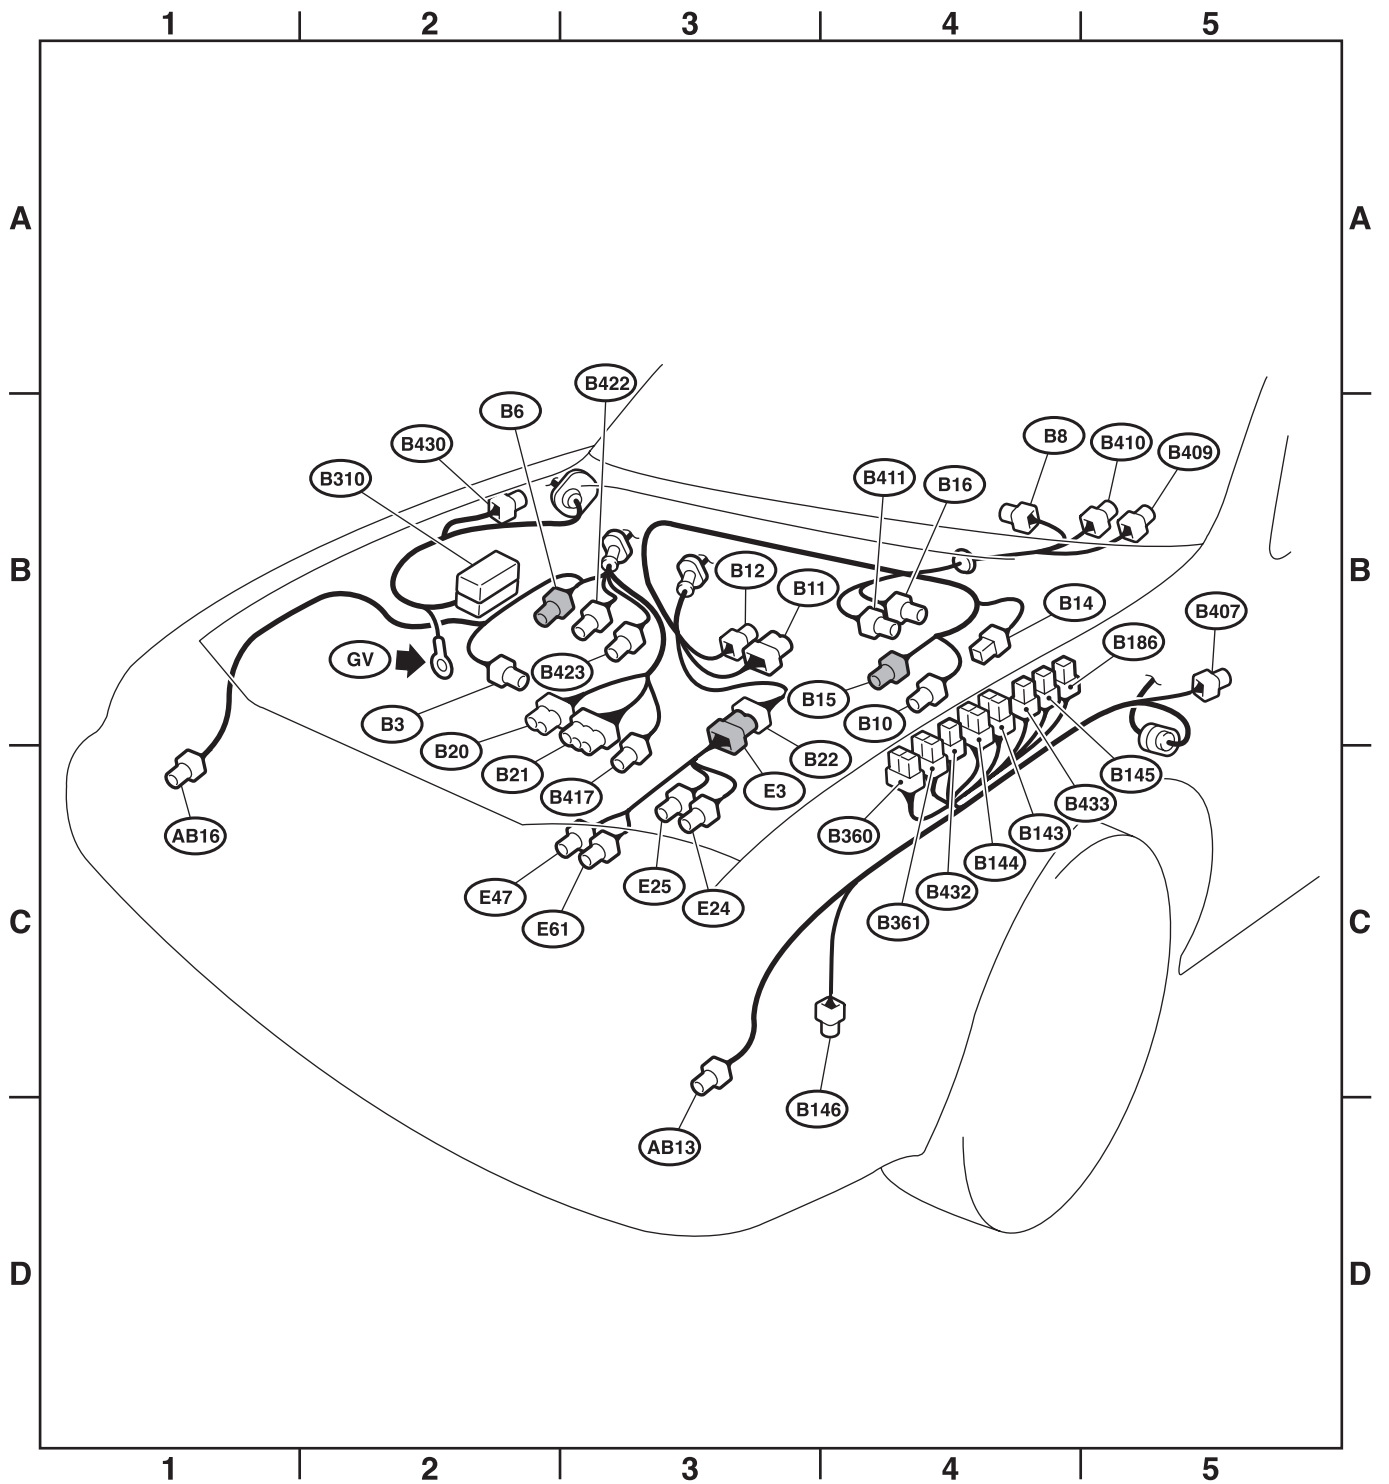

WI-08152