

Door Cord

WIRING SYSTEM

61.Door Cord


A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
D2	2	★	C-3		Front door speaker LH
D3	2	Gray	C-4		Front power window motor LH
D5	8	Gray	C-3		Remote control mirror LH
D7	16	★	C-3		Power window main switch
D10	2	★	C-4		Front step light LH
D12	2	★	C-2		Front door speaker RH
D13	2	Gray	C-2		Front power window motor RH
D15	8	Gray	B-2		Remote control mirror RH
D17	8	★	B-2		Front power window sub switch RH
D18	4	★	B-2		Front door lock actuator RH
D20	2	★	C-3		Front step light RH
D22	10	★	B-3	R10	Rear wiring harness RH
D23	2	Black	B-3		Rear door speaker RH
D24	2	Gray	C-4		Rear power window motor LH
D25	8	★	B-4		Rear power window sub switch LH
D26	4	★	B-5		Rear door lock actuator LH
D28	10	★	C-4	R13	Rear wiring harness LH
D29	2	Black	C-4		Rear door speaker LH
D30	2	Gray	B-3		Rear power window motor RH
D31	8	★	B-3		Rear power window sub switch RH
D32	4	★	B-3		Rear door lock actuator RH
D72	4	★	C-4		Front door lock actuator LH
D83	25	★	B-2	i76	Instrument panel wiring harness
D84	25	★	C-3	i101	
D93	2	★	C-3		Front door tweeter LH
D97	2	★	B-2		Front door tweeter RH
D125	5	★	B-2		Passenger's seat door lock switch
D126	4	★	B-2		Joint connector
D127	4	★	B-2		
D128	6	★	B-2		
D129	2	★	B-3		Rear step light RH
D130	2	★	C-4		Rear step light LH
D131	4	★	C-3		Joint connector
D132	4	★	C-3		
D133	4	★	C-3		

★ : White or natural color

Door Cord

WIRING SYSTEM

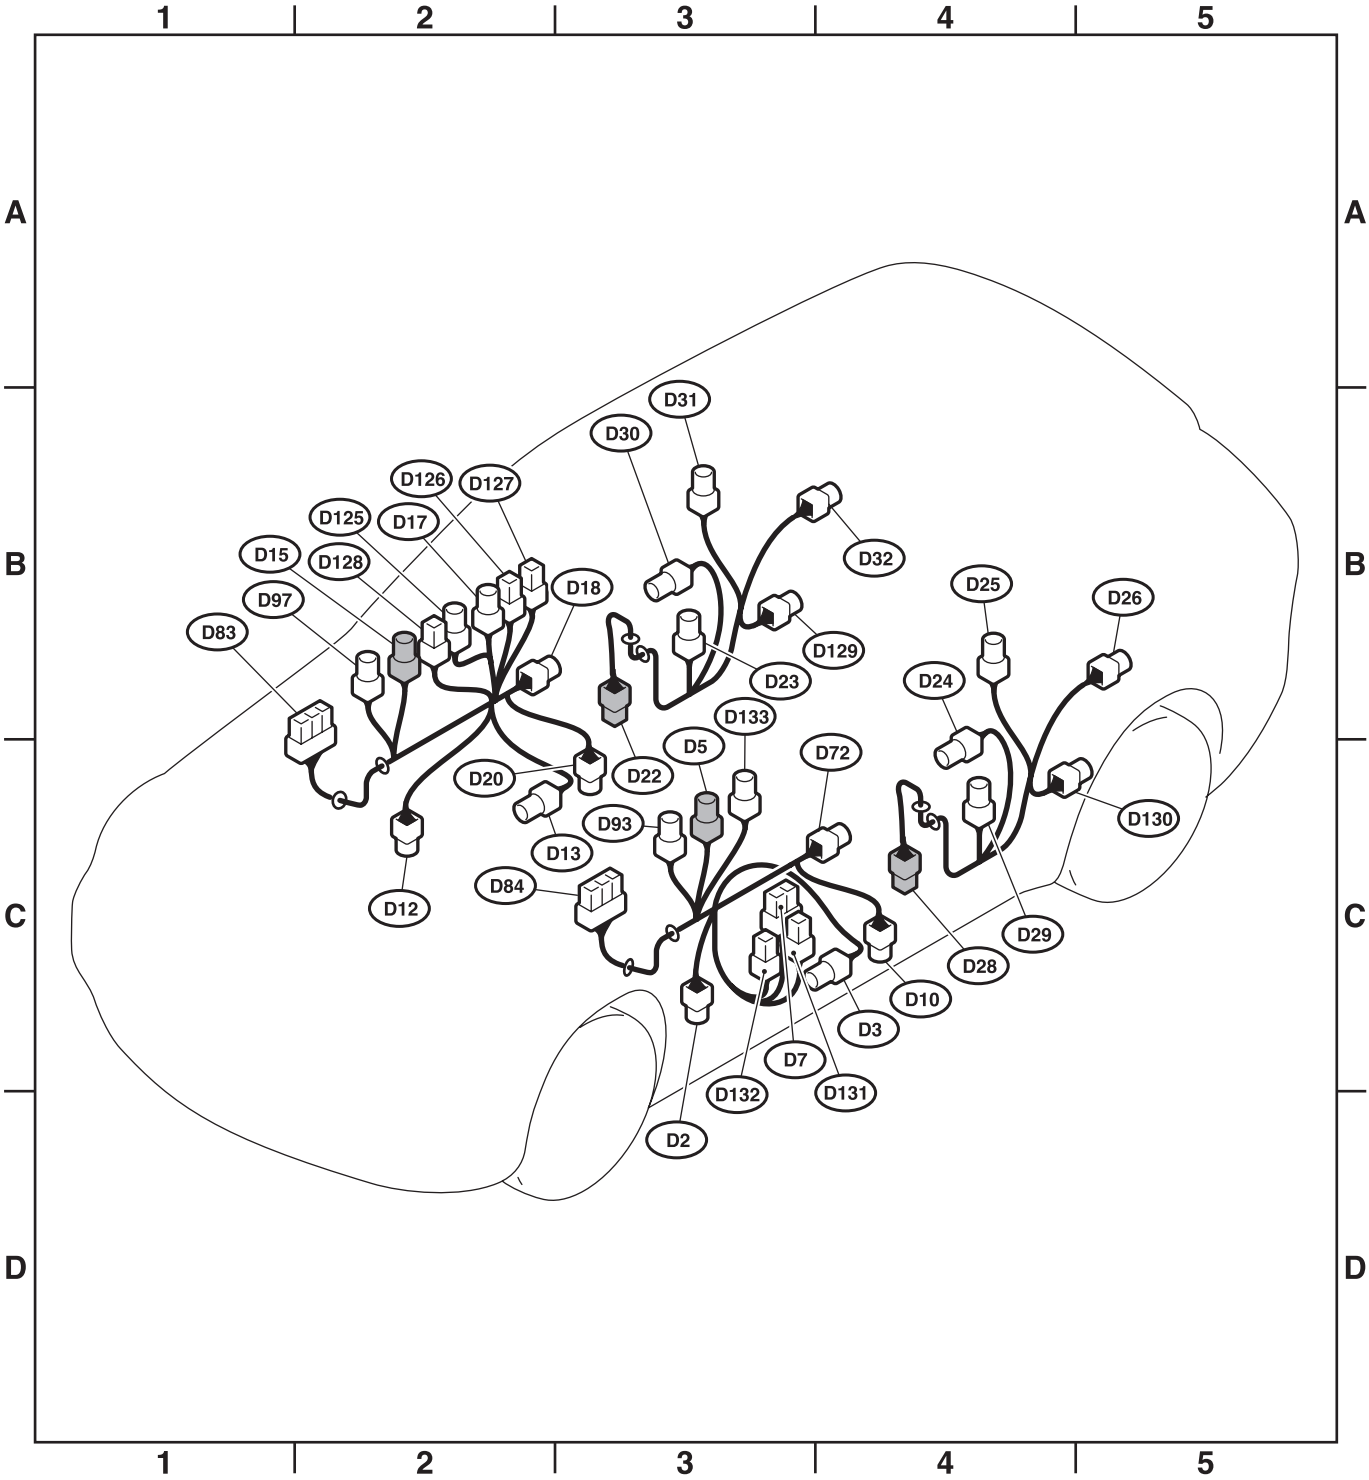

WI-08157