


47.Oil Pressure Warning Light System

A: WIRING DIAGRAM

OIL/P-01

OIL/P-01

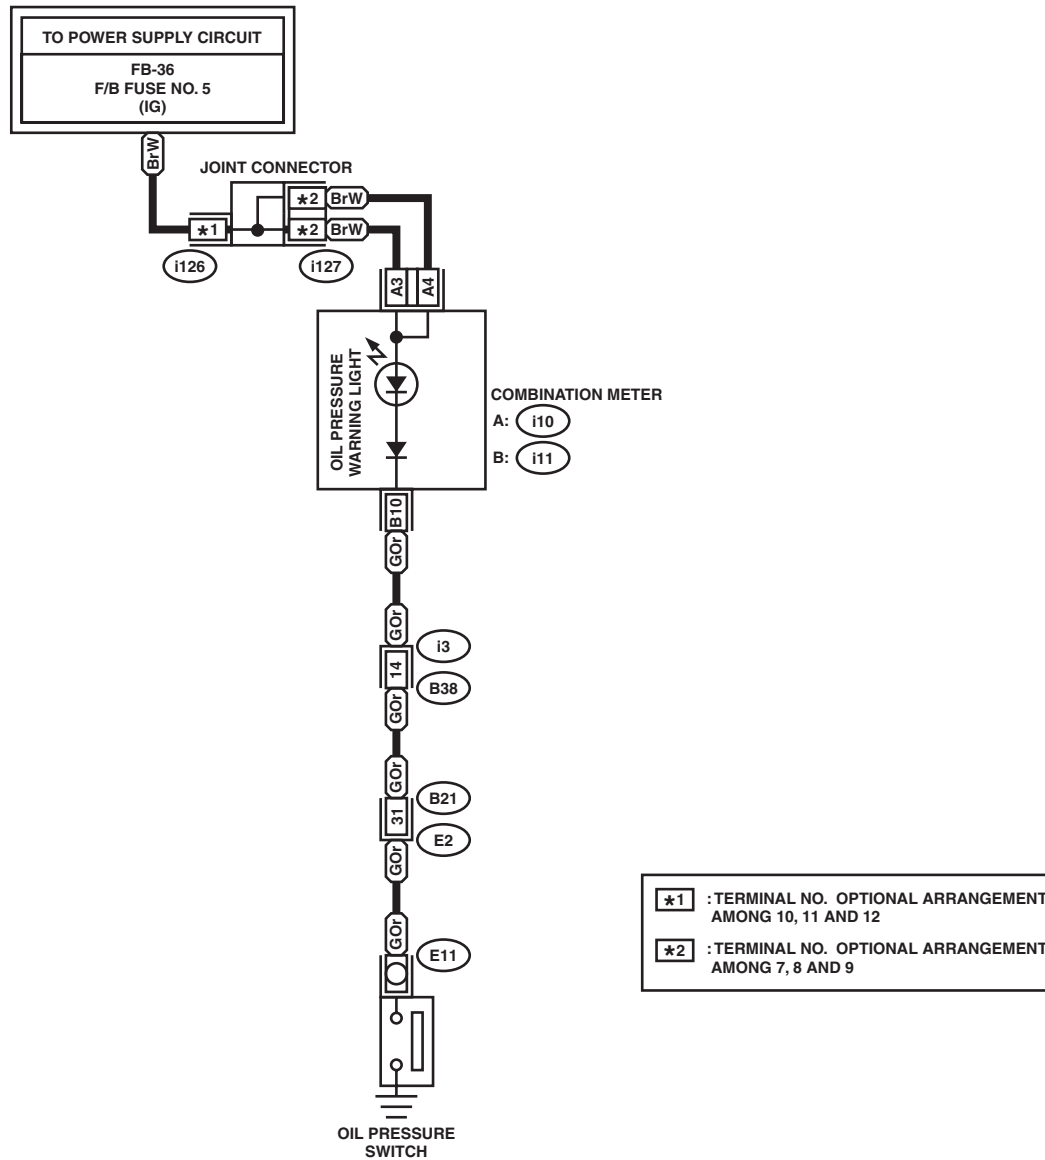

i126 (BLACK)

i127 (BLACK)

1	2	3	4	5	6
7	8	9	10	11	12

B: i11 (GREEN)

1	2	3	4	5	6
7	8	9	10	11	12

B38

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18

A: i10 (GREEN)

1	2	3	4	5	6	7	8	9	10	11	12	13	14
15	16	17	18	19	20	21	22	23	24	25	26	27	28

B21 (BLACK)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41			
42	43	44	45	46	47					
48	49	50	51	52	53	54				