


# Electrical Component Location

BRAKE VACUUM CONTROL (BVC)(DIAGNOSTICS)

## 4. Electrical Component Location

### A: LOCATION

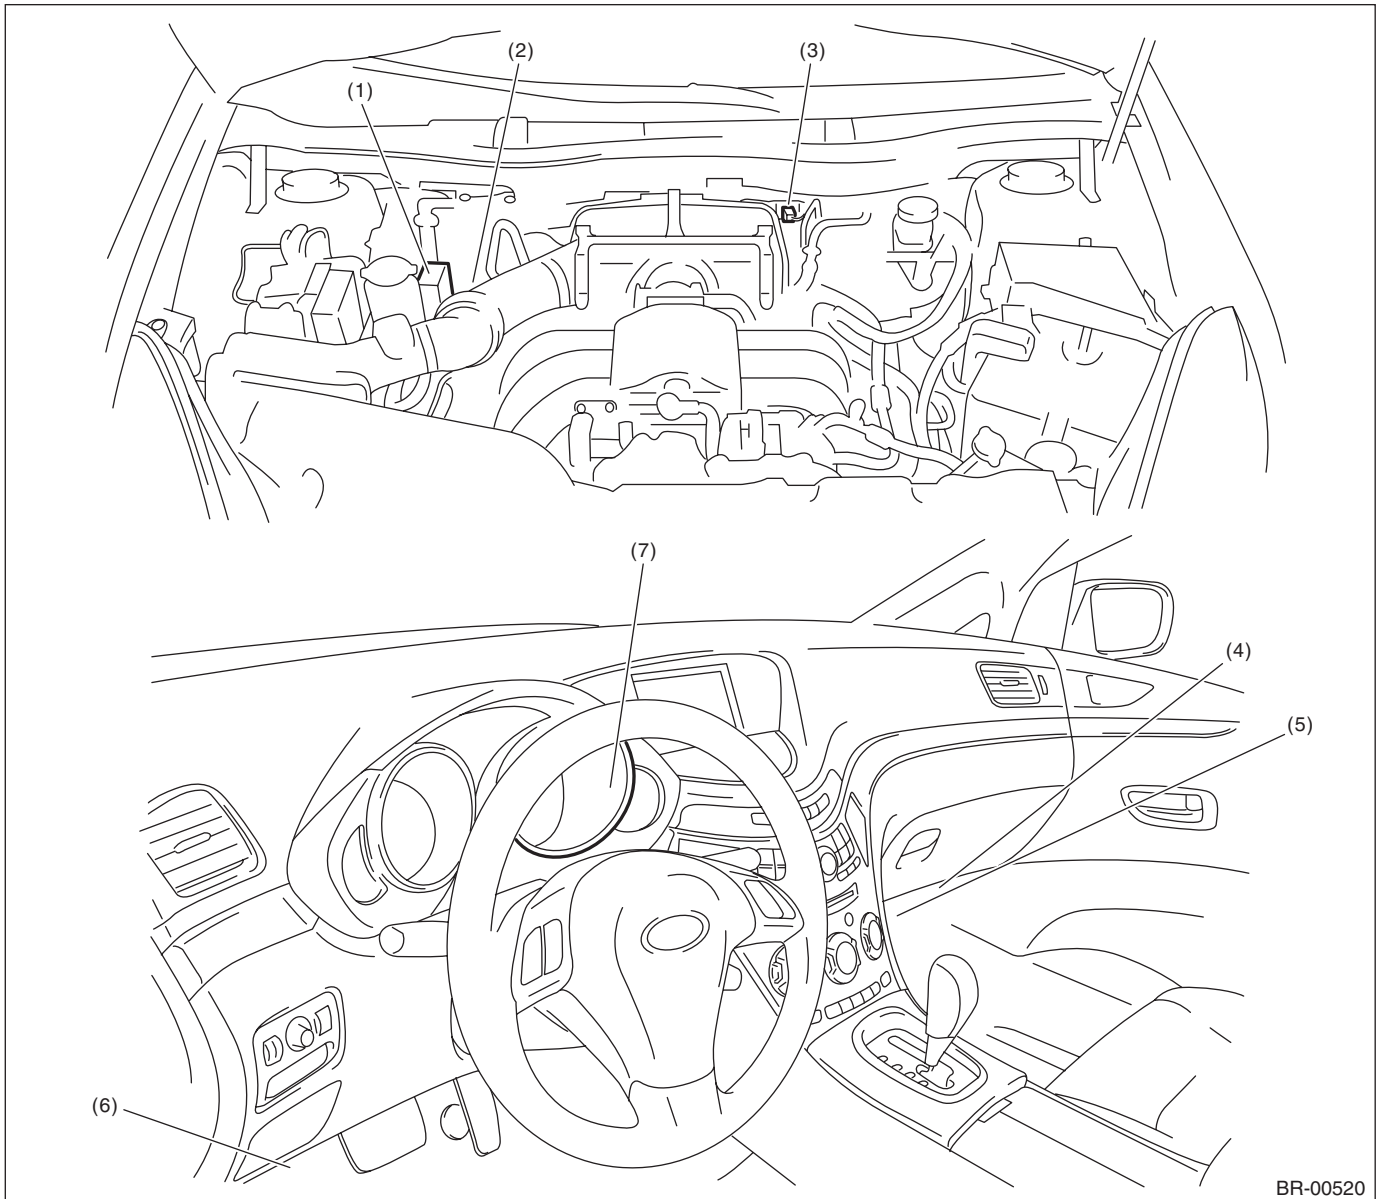


BR-00520


- |                             |                                 |                         |
|-----------------------------|---------------------------------|-------------------------|
| (1) Brake vacuum pump relay | (4) Test mode connector         | (6) Data link connector |
| (2) Brake vacuum pump       | (5) Engine control module (ECM) | (7) Odo/trip meter      |
| (3) Brake vacuum sensor     |                                 |                         |

# Electrical Component Location


## BRAKE VACUUM CONTROL (BVC)(DIAGNOSTICS)

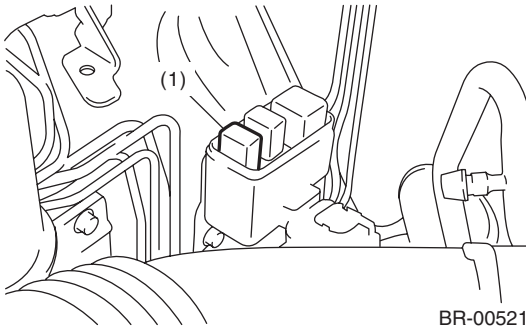


BR-00521

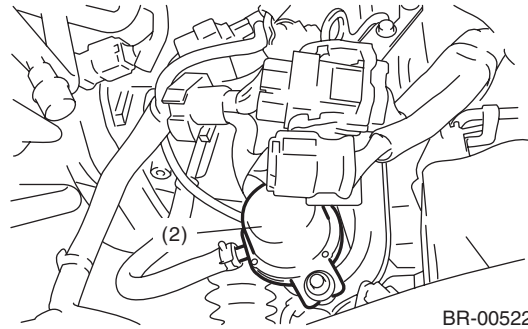


BR-00522

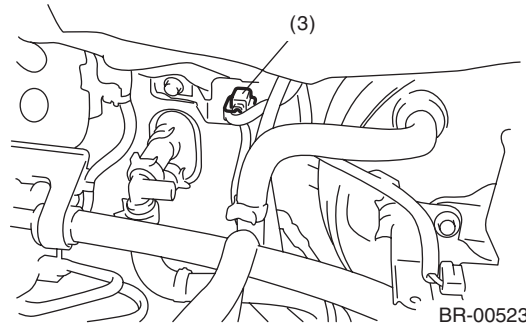


BR-00523

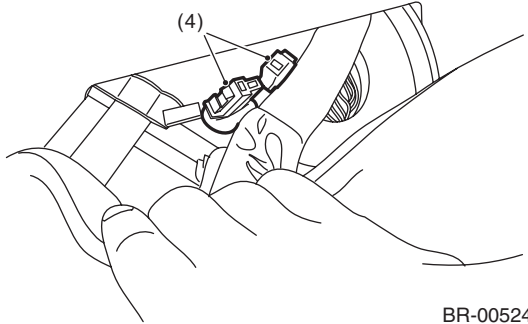


BR-00524

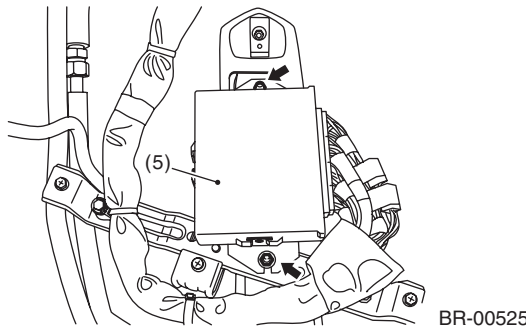

BR-00525

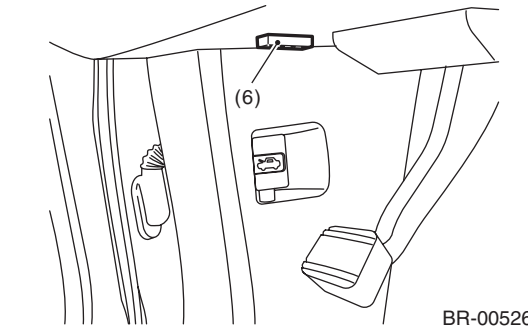

BR-00526

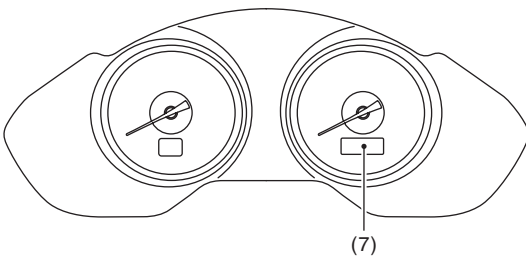

BR-00527

SUBARU®