

## **Inspection Mode**

BRAKE VACUUM CONTROL (BVC)(DIAGNOSTICS)

---

### **8. Inspection Mode**

#### **A: PROCEDURE**

Reproduce the malfunction occurrence condition as possible.

Drive the vehicle at least ten minutes.