



### 3. Rear Stabilizer

#### A: REMOVAL

- 1) Lift-up the vehicle, and then remove the rear wheels.
- 2) Remove the stabilizer link.

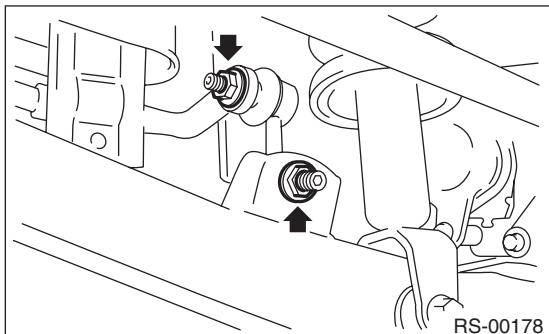

- 3) Remove the stabilizer link.

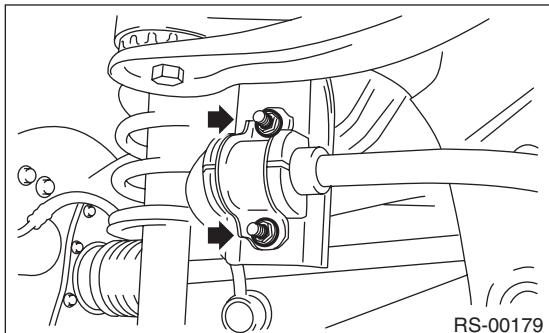

#### B: INSTALLATION

##### NOTE:

- To install the bushing, align the bushing end to the stabilizer stopper or the end of the paint mark.
- Be sure to use a new flange nut.
- Always tighten the stabilizer bushing in the state where the vehicle is at curb weight and the wheels are in full contact with the ground.

Install in the reverse order of removal.

##### ***Tightening torque:***

###### ***Stabilizer link***

***60 N·m (6.1 kgf·m, 44 ft-lb)***

###### ***Stabilizer clamp***

***35 N·m (3.6 kgf·m, 25.8 ft-lb)***

#### C: INSPECTION

- 1) Check the bushing for cracks, fatigue or damage.
- 2) Check the stabilizer link for damage.