

# Basic Diagnostic Procedure

## TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

### 1. Basic Diagnostic Procedure

#### A: PROCEDURE

##### CAUTION:

Remove foreign matter (dust, water, oil etc.) from the tire pressure monitoring control module connector when removing or installing.

##### NOTE:

To check harness for broken wires or short circuits, shake trouble spot or connector.

Step	Check	Yes	No
1 <b>CHECK PRE-INSPECTION.</b> 1) Check with the user regarding when the warning light lit or started blinking. 2) Before performing diagnostics, check the components which might mal-affect tire pressure monitor system. <Ref. to TPM(diag)-3, INSPECTION, General Description.>	Is the component that might affect the tire pressure monitor system normal?	Go to step 2.	Repair or replace each component.
2 <b>CHECK DIAGNOSTIC TROUBLE CODE (DTC).</b> 1) Turn the ignition switch to OFF. 2) Connect the Subaru Select Monitor to data link connector. 3) Turn the ignition switch to ON and run the Subaru Select Monitor.  NOTE: If the communication function of the Subaru Select Monitor cannot be executed normally, check the communication circuit. <Ref. to TPM(diag)-11, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, INSPECTION, Subaru Select Monitor.> 4) Read the DTC. <Ref. to TPM(diag)-16, OPERATION, Read Diagnostic Trouble Code (DTC).>	Is DTC displayed?	Go to step 4.	Go to step 3.
3 <b>PERFORM GENERAL DIAGNOSTICS.</b> 1) Inspect using "General Diagnostic Table". <Ref. to TPM(diag)-42, General Diagnostic Table.> 2) Perform the Clear Memory Mode. <Ref. to TPM(diag)-9, CLEAR MEMORY, OPERATION, Subaru Select Monitor.> 3) Perform the Inspection Mode. <Ref. to TPM(diag)-17, Inspection Mode.> 4) Read the DTC. <Ref. to TPM(diag)-8, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.> Check the DTC is not displayed.	Does the tire pressure warning light illuminates for about 2 seconds and then goes off after turning on the ignition switch, and then goes out?	Finish the diagnosis.	Check using "Diagnostic Procedure for TPM" <Ref. to TPM(diag)-14, WITHOUT DTC, INSPECTION, Subaru Select Monitor.>
4 <b>PERFORM DIAGNOSIS.</b> 1) Refer to "List of Diagnostic Trouble Code (DTC)". 2) Correct the cause of trouble. 3) Perform the Clear Memory Mode. <Ref. to TPM(diag)-9, CLEAR MEMORY, OPERATION, Subaru Select Monitor.> 4) Perform the drive test. Drive the vehicle at a speed more than 40 km/h (25 MPH) for at least 10 minutes. 5) Read the DTC. <Ref. to TPM(diag)-8, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is DTC displayed?	Repeat steps 1 to 4 until DTC is not shown.	Finish the diagnosis.