

List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

11. List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Detailed code	Display	Content of diagnosis	Reference target
C0021	4211	FR wheel speed sensor open line	Front Right ABS Sensor Open Circuit	<Ref. to VDC(diag)-36, DTC C0021 FRONT RIGHT ABS SENSOR OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0022	4221	FR wheel speed sensor system	Front ABS Wheel Speed Sensor RH Signal Malfunction	<Ref. to VDC(diag)-40, DTC C0022 FRONT ABS WHEEL SPEED SENSOR RH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4222	FR wheel sensor noise	Front Right ABS Sensor Noise	<Ref. to VDC(diag)-40, DTC C0022 FRONT RIGHT ABS SENSOR NOISE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0023	4231	FL wheel speed sensor open line	Front Left ABS Sensor Open Circuit	<Ref. to VDC(diag)-36, DTC C0023 FRONT LEFT ABS SENSOR OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0024	4241	FL wheel speed sensor signal system	Front ABS Wheel Speed Sensor LH Signal Malfunction	<Ref. to VDC(diag)-40, DTC C0024 FRONT ABS WHEEL SPEED SENSOR LH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4242	FL wheel sensor noise	Front Left ABS Sensor Noise	<Ref. to VDC(diag)-40, DTC C0024 FRONT LEFT ABS SENSOR NOISE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0025	4251	RR wheel sensor open line	Rear Right ABS Sensor Open Circuit	<Ref. to VDC(diag)-36, DTC C0025 REAR RIGHT ABS SENSOR OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0026	4261	RR wheel speed sensor signal system	Rear ABS Wheel Speed Sensor RH Signal Malfunction	<Ref. to VDC(diag)-40, DTC C0026 REAR ABS WHEEL SPEED SENSOR RH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4262	RR wheel sensor noise	Rear Right ABS Sensor Noise	<Ref. to VDC(diag)-40, DTC C0026 REAR RIGHT ABS SENSOR NOISE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0027	4271	RL wheel speed sensor open line	Rear Left ABS Sensor Open Circuit	<Ref. to VDC(diag)-37, DTC C0027 REAR LEFT ABS SENSOR OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0028	4281	RL wheel speed sensor signal system	Rear ABS Wheel Speed Sensor LH Signal Malfunction	<Ref. to VDC(diag)-41, DTC C0028 REAR ABS WHEEL SPEED SENSOR LH SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4282	RL wheel sensor noise	Rear Left ABS Sensor Noise	<Ref. to VDC(diag)-40, DTC C0028 REAR LEFT ABS SENSOR NOISE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0031	4311	FR hold valve malfunction	Front Inlet Solenoid Valve RH Malfunction In VDCCM&H/U	<Ref. to VDC(diag)-43, DTC C0031 FRONT INLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0032	4321	FR pressure reducing valve malfunction	Front Outlet Solenoid Valve RH Malfunction In VDCCM&H/U	<Ref. to VDC(diag)-43, DTC C0032 FRONT OUTLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0033	4331	FL hold valve malfunction	Front Inlet Solenoid Valve LH Malfunction In VDCCM&H/U	<Ref. to VDC(diag)-43, DTC C0033 FRONT INLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

DTC	Detailed code	Display	Content of diagnosis	Reference target
C0034	4341	FL pressure reducing valve malfunction	Front Outlet Solenoid Valve LH Malfunction In VDCCM&H/U	<Ref. to VDC(diag)-44, DTC C0034 FRONT OUTLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0035	4351	RR hold valve malfunction	Rear Inlet Solenoid Valve RH Malfunction In VDCCM&H/U	<Ref. to VDC(diag)-44, DTC C0035 REAR INLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0036	4361	RR pressure reducing valve malfunction	Rear Outlet Solenoid Valve RH Malfunction In VDCCM&H/U	<Ref. to VDC(diag)-44, DTC C0036 REAR OUTLET SOLENOID VALVE RH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0037	4371	RL hold valve malfunction	Rear Inlet Solenoid Valve LH Malfunction In VDCCM&H/U	<Ref. to VDC(diag)-44, DTC C0037 REAR INLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0038	4381	RL pressure reducing valve malfunction	Rear Outlet Solenoid Valve LH Malfunction In VDCCM&H/U	<Ref. to VDC(diag)-44, DTC C0038 REAR OUTLET SOLENOID VALVE LH MALFUNCTION IN VDCCM&H/U, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0061	4611	VDC switching valve (P) system	VDC Switchover Valve (P)	<Ref. to VDC(diag)-44, DTC C0061 VDC SWITCHOVER VALVE (P), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0062	4621	VDC switching valve (S) system	VDC Switchover Valve (S)	<Ref. to VDC(diag)-44, DTC C0062 VDC SWITCHOVER VALVE (S), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0063	4631	VDC switching valve	VDC Switchover Valve	<Ref. to VDC(diag)-45, DTC C0063 VDC SWITCHOVER VALVE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0042	4421	Power supply voltage failure	Power Voltage Malfunction	<Ref. to VDC(diag)-47, DTC C0042 POWER VOLTAGE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0047	C471	CAN communication system	Improper CAN Communication	<Ref. to VDC(diag)-50, DTC C0047 IMPROPER CAN COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0051	4511	Valve relay system open line	Valve Relay Open Circuit	<Ref. to VDC(diag)-51, DTC C0051 VALVE RELAY OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4512	Valve relay system short	Valve Relay Short Circuit	<Ref. to VDC(diag)-53, DTC C0051 VALVE RELAY SHORT CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0052	4521	Motor relay system open line	Motor And Motor Relay Open Circuit	<Ref. to VDC(diag)-54, DTC C0052 MOTOR AND MOTOR RELAY OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4522	Motor relay system short	Motor And Motor Relay Short Circuit	<Ref. to VDC(diag)-57, DTC C0052 MOTOR AND MOTOR RELAY SHORT CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4523	Motor system not running	Motor Do Not Work	<Ref. to VDC(diag)-61, DTC C0052 MOTOR DO NOT WORK, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4524	Motor system	Motor Malfunction	<Ref. to VDC(diag)-55, DTC C0052 MOTOR MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4525	Motor fail safe system short	Motor Fail Safe Relay Short Circuit	<Ref. to VDC(diag)-58, DTC C0052 MOTOR FAIL SAFE RELAY SHORT CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

DTC	Detailed code	Display	Content of diagnosis	Reference target
C0054	4541	Brake light switch open line	Brake Lamp Switch Open Circuit	<Ref. to VDC(diag)-63, DTC C0054 BRAKE LAMP SWITCH OPEN CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0056	4561	G Sensor Output Seizure	G Sensor Output Freeze	<Ref. to VDC(diag)-65, DTC C0056 G SENSOR OUTPUT FREEZE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4562	G sensor signal	G Sensor Signal Malfunction	<Ref. to VDC(diag)-65, DTC C0056 G SENSOR SIGNAL MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4563	Yaw G sensor power voltage	Yaw Rate G Sensor Power Supply Voltage Malfunction	<Ref. to VDC(diag)-66, DTC C0056 YAW RATE G SENSOR POWER SUPPLY VOLTAGE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4564	G sensor output	G Sensor Output Malfunction	<Ref. to VDC(diag)-67, DTC C0056 G SENSOR OUTPUT MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	C565	G sensor communication	G Sensor Communication Malfunction	<Ref. to VDC(diag)-76, DTC C0056 G SENSOR COMMUNICATION MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4566	G sensor inside	G Sensor Internal Problem Malfunction	<Ref. to VDC(diag)-76, DTC C0056 G SENSOR INTERNAL PROBLEM MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0057	C571	ECM communication circuit	ECM Communication	<Ref. to VDC(diag)-68, DTC C0057 ECM COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	C573	TCM communication circuit	AT Communication	<Ref. to VDC(diag)-68, DTC C0057 AT COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4574	Transmission system	Transmission System Failure	<Ref. to VDC(diag)-69, DTC C0057 TRANSMISSION SYSTEM FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0071	4711	Steering angle sensor counter	Steering Angle Sensor Internal Problem Malfunction	<Ref. to VDC(diag)-70, DTC C0071 STEERING ANGLE SENSOR INTERNAL PROBLEM MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	C712	No signal from steering angle sensor	Steering Angle Sensor Communication Malfunction	<Ref. to VDC(diag)-72, DTC C0071 STEERING ANGLE SENSOR COMMUNICATION MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4713	Steering angle sensor signal seizure	Steering Angle Sensor Signal Freeze	<Ref. to VDC(diag)-74, DTC C0071 STEERING ANGLE SENSOR SIGNAL FREEZE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	4714	Steering angle sensor calibration incomplete	Steering Angle Sensor Calibration Non Completion	<Ref. to VDC(diag)-74, DTC C0071 STEERING ANGLE SENSOR CALIBRATION NON COMPLETION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>