


# Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

## 4. Electrical Component Location

### A: LOCATION

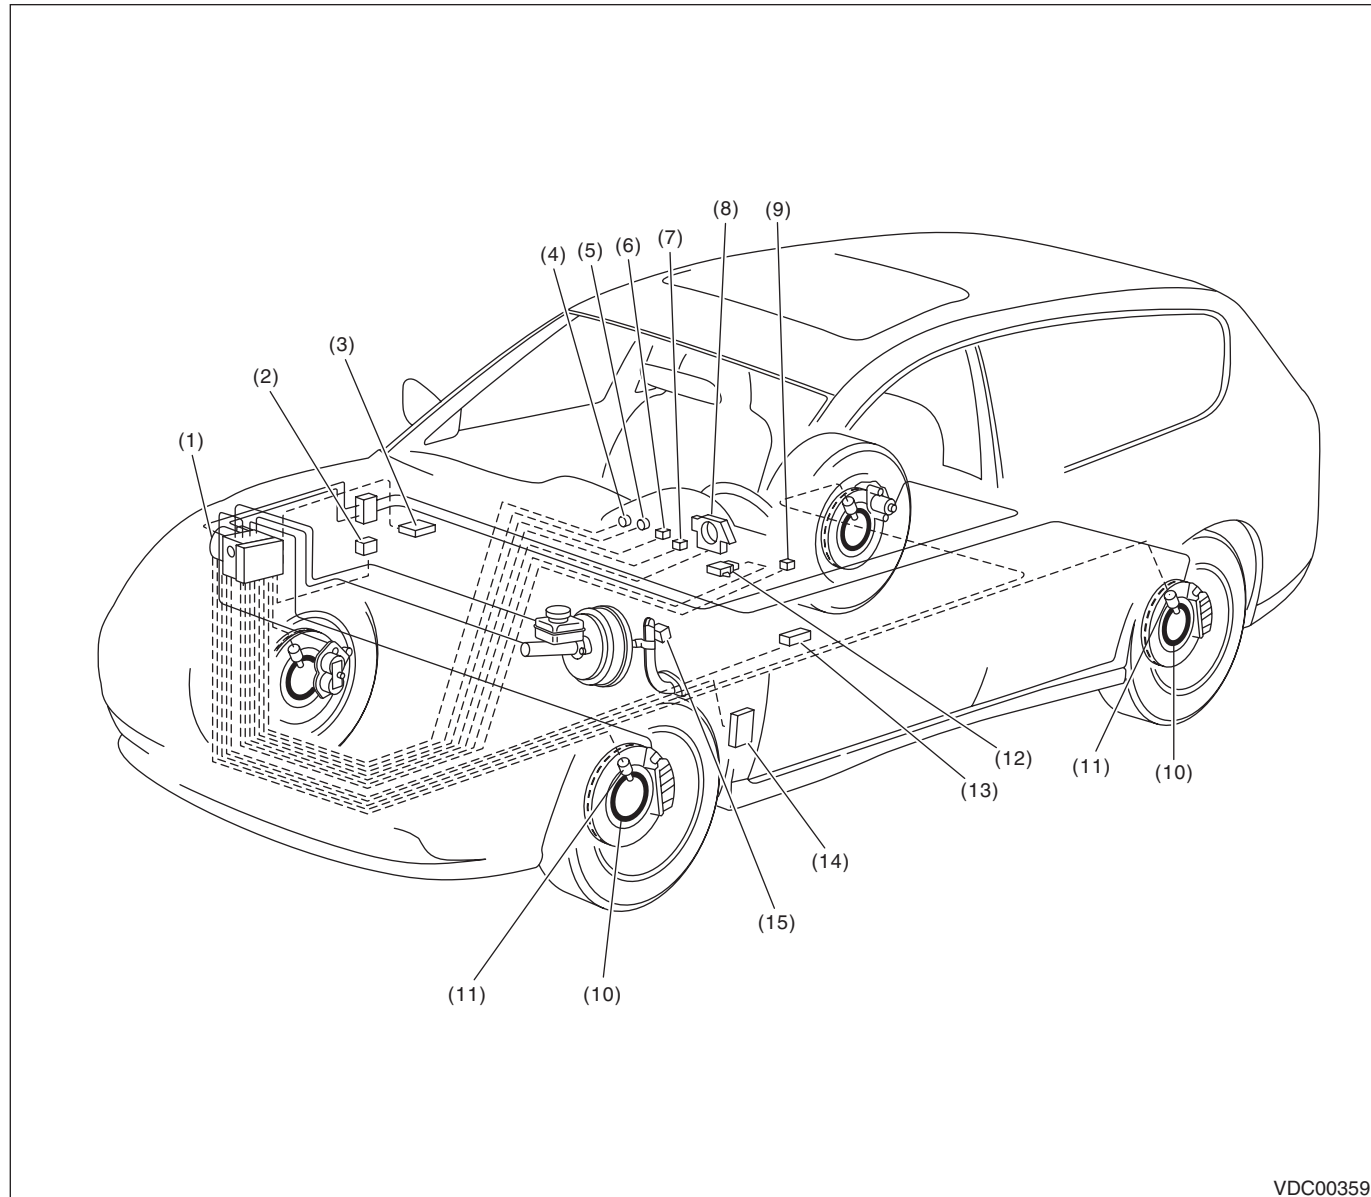

- |                                                             |                                                   |                                        |
|-------------------------------------------------------------|---------------------------------------------------|----------------------------------------|
| (1) VDC control module & hydraulic control unit (VDCCM&H/U) | (6) VDC indicator light                           | (11) ABS wheel speed sensor            |
| (2) Relay box                                               | (7) VDC warning light and TCS OFF indicator light | (12) Yaw rate & lateral G sensor       |
| (3) Engine control module (ECM)                             | (8) Steering angle sensor                         | (13) Data link connector               |
| (4) Brake warning light (EBD warning light)                 | (9) TCS OFF switch                                | (14) Transmission control module (TCM) |
| (5) ABS warning light                                       | (10) Magnetic encoder                             | (15) Stop light switch                 |

# Electrical Component Location

## VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

