


## 2. Front Catalytic Converter

### A: REMOVAL

The front and rear catalytic converters are integrated into the front exhaust pipe therefore, refer to "Front Exhaust Pipe" for the removal procedure. <Ref. to EX(H6DO)-4, REMOVAL, Front Exhaust Pipe.>

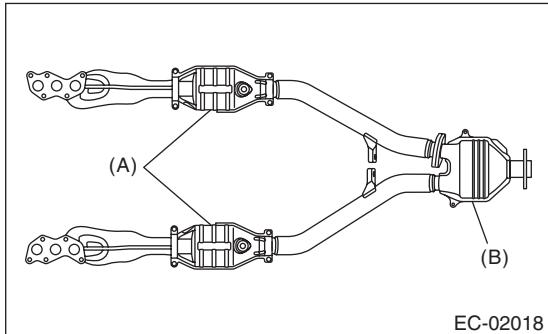


(A) Front catalytic converter

(B) Rear catalytic converter

### B: INSTALLATION

The front and rear catalytic converters are integrated into front exhaust pipe as one unit; therefore, refer to "Front Exhaust Pipe" for installation procedure. <Ref. to EX(H6DO)-5, INSTALLATION, Front Exhaust Pipe.>

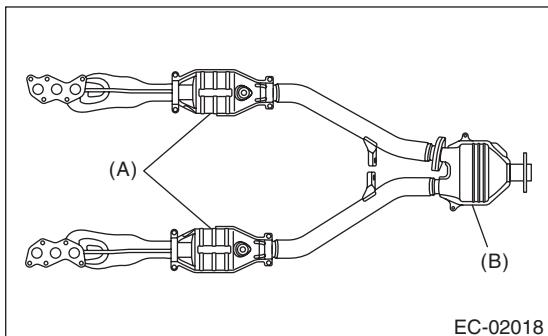

(A) Front catalytic converter

(B) Rear catalytic converter

### C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.