


Rear Catalytic Converter

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

3. Rear Catalytic Converter

A: REMOVAL


The front and rear catalytic converters are integrated into the front exhaust pipe therefore, refer to “Front Exhaust Pipe” for the removal procedure. <Ref. to EX(H6DO)-4, REMOVAL, Front Exhaust Pipe.>

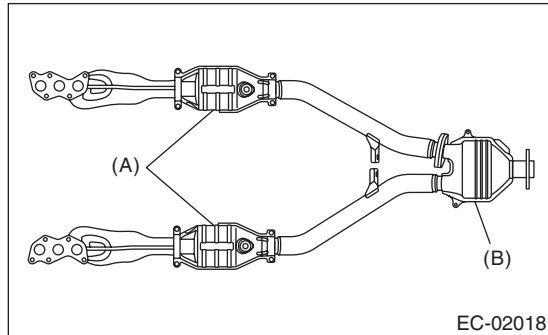

- (A) Front catalytic converter
- (B) Rear catalytic converter

B: INSTALLATION

The front and rear catalytic converters are integrated into front exhaust pipe as one unit; therefore, refer to “Front Exhaust Pipe” for installation procedure. <Ref. to EX(H6DO)-5, INSTALLATION, Front Exhaust Pipe.>

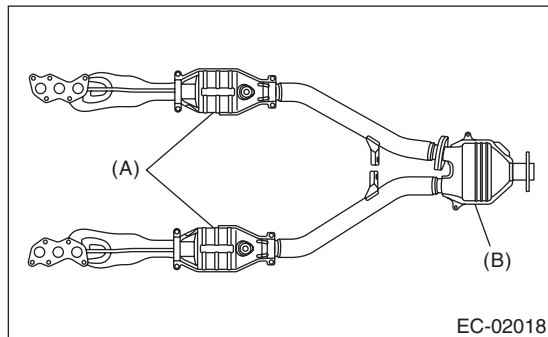

- (A) Front catalytic converter
- (B) Rear catalytic converter

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.