

8. Fuel Sub Level Sensor

A: REMOVAL

For removal procedure, refer to “FU (H6DO)” section. <Ref. to FU(H6DO)-48, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

For installation procedure, refer to “FU (H6DO)” section. <Ref. to FU(H6DO)-48, INSTALLATION, Fuel Sub Level Sensor.>