


General Description

EXHAUST

1. General Description

A: COMPONENT

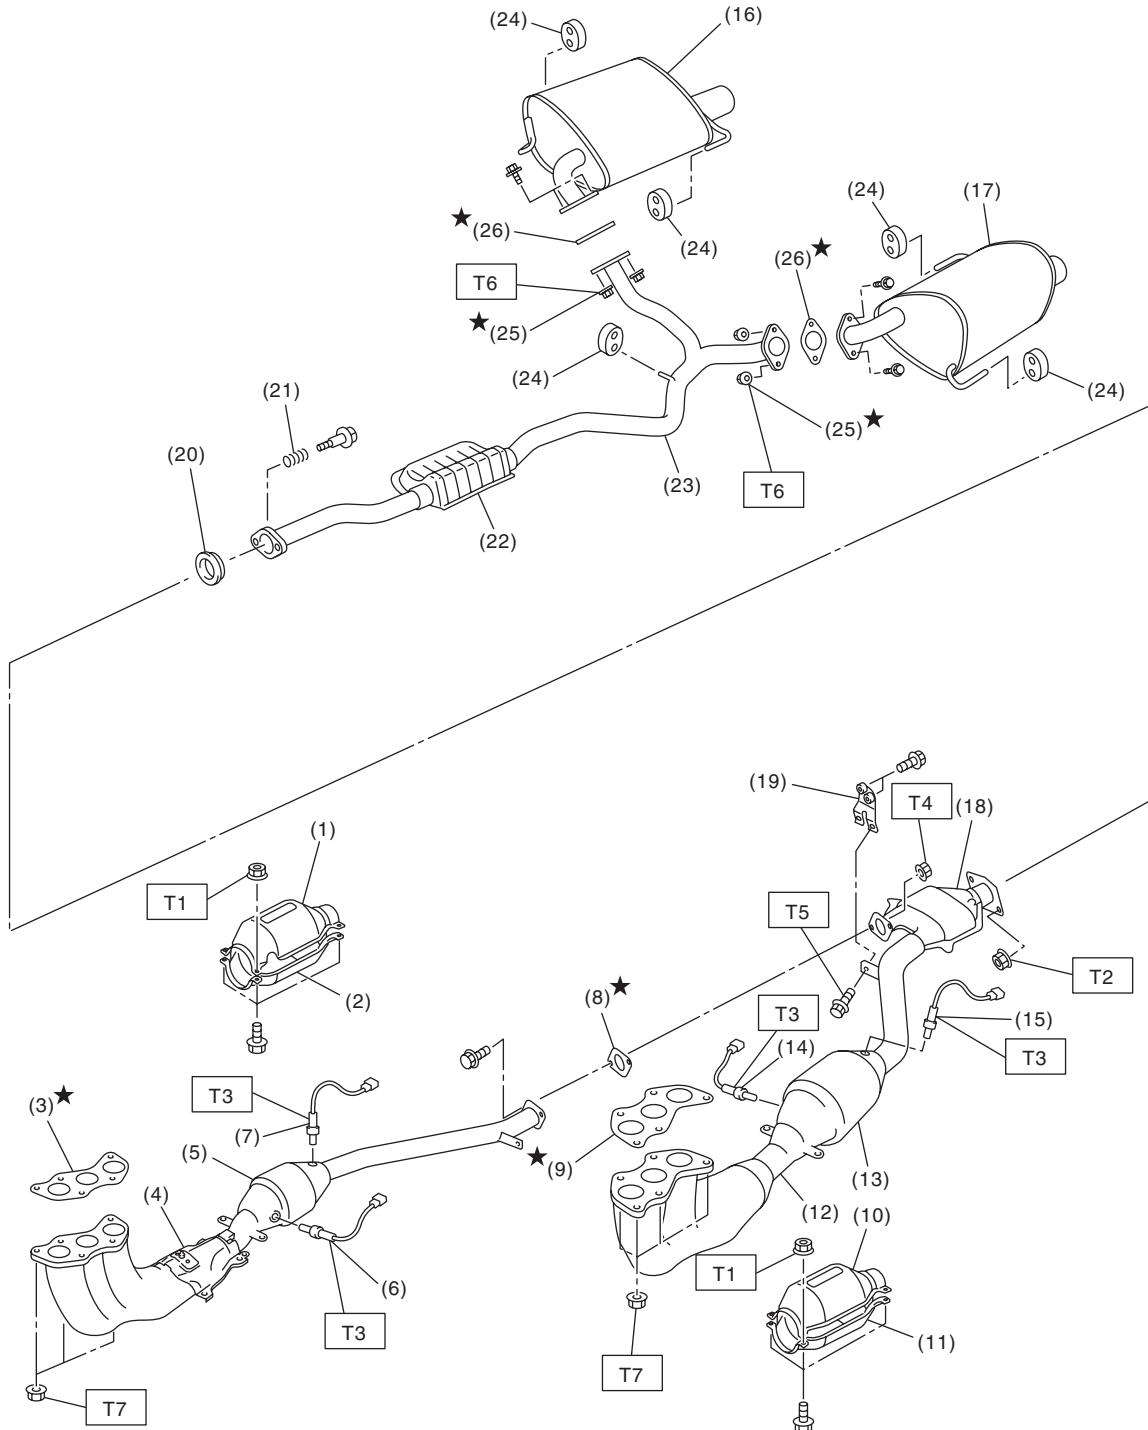

EX-02156

| | | |
|---|-------------------------------------|-----------------------|
| (1) Front catalytic converter upper cover (RH) | (12) Front exhaust pipe (LH) | (24) Cushion rubber |
| (2) Front catalytic converter lower cover (RH) | (13) Front catalytic converter (LH) | (25) Self-locking nut |
| (3) Gasket | (14) Front oxygen (A/F) sensor (LH) | (26) Gasket |
| (4) Front exhaust pipe (RH) | (15) Rear oxygen sensor (LH) | |
| (5) Front catalytic converter (RH) | (16) Muffler (RH) | |
| (6) Front oxygen (A/F) sensor (RH) | (17) Muffler (LH) | |
| (7) Rear oxygen sensor (RH) | (18) Rear catalytic converter | |
| (8) Gasket | (19) Bracket | |
| (9) Gasket | (20) Gasket | |
| (10) Front catalytic converter upper cover (LH) | (21) Spring | |
| (11) Front catalytic converter lower cover (LH) | (22) Chamber | |
| | (23) Rear exhaust pipe | |

Tightening torque: N·m (kgf·m, ft·lb)

T1: 13 (1.3, 9.4)

T2: 18 (1.8, 13.0)

T3: 21 (2.1, 15.2)

T4: 30 (3.1, 22.4)

T5: 35 (3.6, 26.0)

T6: 48 (4.9, 35.4)

T7: 70 (7.1, 52.0)

B: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.