


## 12. Variable Valve Lift Diagnosis Oil Pressure Switch

### A: REMOVAL


- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.
- 3) Remove the air intake chamber. <Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>
- 4) Disconnect the connector from variable valve lift diagnosis oil pressure switch.
- 5) Remove the variable valve lift diagnosis oil pressure switch.

- LH side

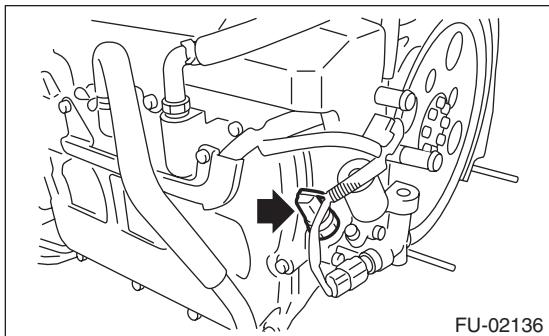

FU-02136

- RH side

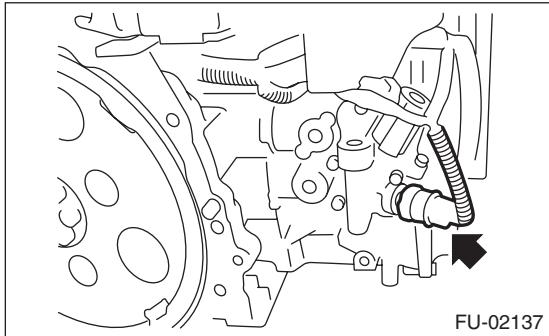

FU-02137

### B: INSTALLATION

Install in the reverse order of removal.

**NOTE:**

Apply liquid gasket to variable valve lift diagnosis oil pressure switch threads.

***Liquid gasket:***

**THREE BOND 1324 (Part No. 004403042) or  
equivalent**

***Tightening torque:***

**17 N·m (1.7 kgf-m, 12.5 ft-lb)**