


## 15. Rear Oxygen Sensor


### A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from the battery.
- 3) Lift-up the vehicle.
- 4) Disconnect the connector from rear oxygen sensor.

- LH side

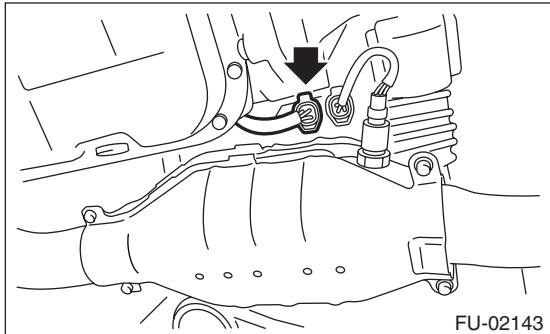

- RH side

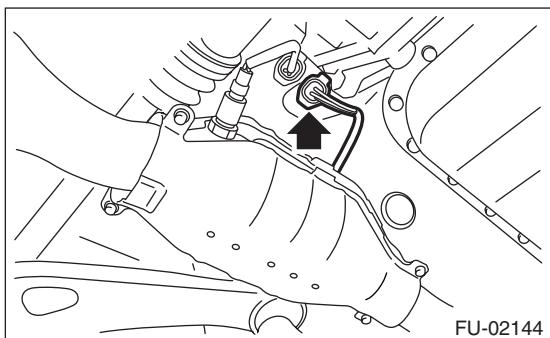


- 5) Remove the clip holding the harness.
- 6) Apply spray-type lubricant to the threaded portion of rear oxygen sensor, and leave it for one minute or more.

- 7) Remove the rear oxygen sensor.


**CAUTION:**

When removing the rear oxygen sensor, wait until exhaust pipe cools, otherwise it will damage the exhaust pipe.

- LH side

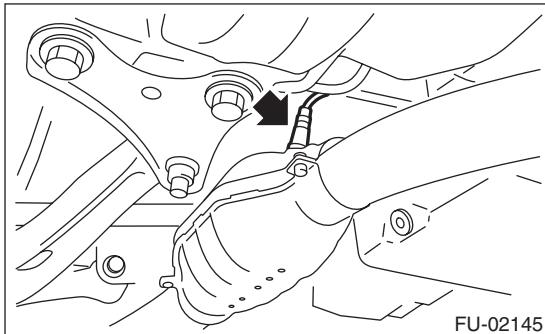

- RH side

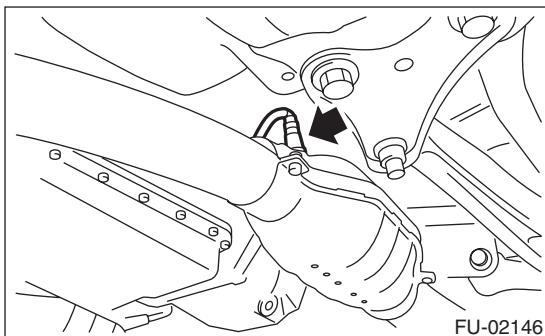

# Rear Oxygen Sensor

## FUEL INJECTION (FUEL SYSTEMS)

### B: INSTALLATION

1) Before installing rear oxygen sensor, apply the anti-seize compound only to the threaded portion of rear oxygen sensor to make the next removal easier.

**Anti-seize compound:**

**NEVER-SEEZ NSN, JET LUBE SS-30 or equivalent**

**CAUTION:**


**Never apply anti-seize compound to the protector of rear oxygen sensor.**

2) Install the rear oxygen sensor.


**Tightening torque:**

**21 N·m (2.1 kgf·m, 15.2 ft-lb)**

- LH side

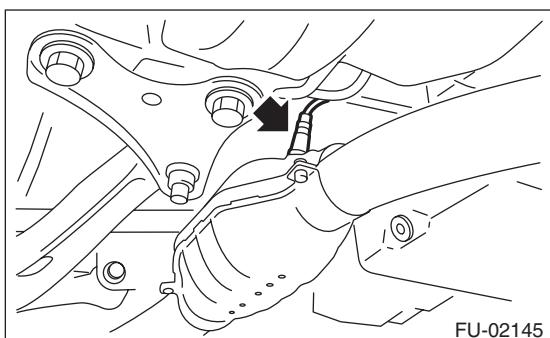


- RH side

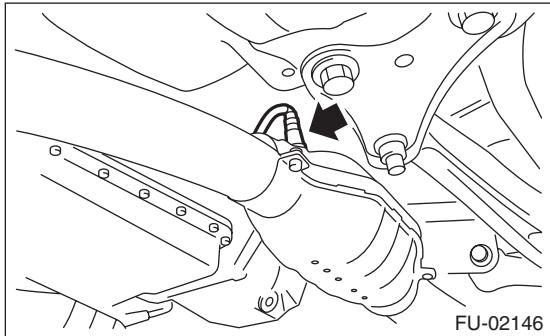


3) Hold the harness with clip.

- 4) Connect the connector to rear oxygen sensor.

- LH side

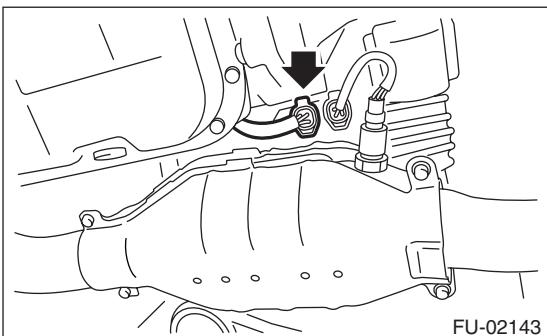

- RH side

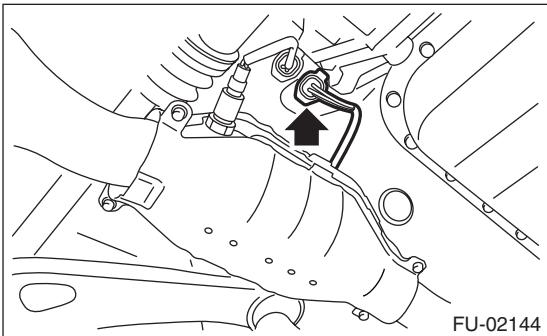

5) Lower the vehicle.

6) Connect the battery ground cable to the battery.