



2. Throttle Body

A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.
- 3) Remove the air intake chamber. <Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>
- 4) Disconnect the connector from throttle body.

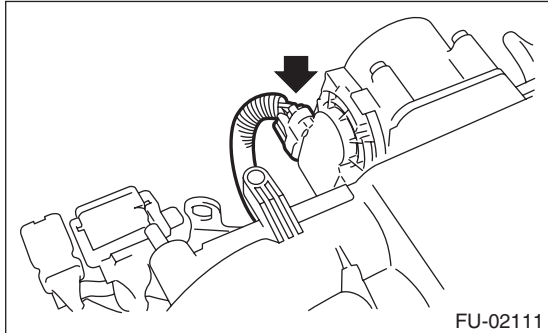

- 5) Disconnect the engine coolant hoses (A) from the throttle body.
- 6) Remove the bolts (B) which secure throttle body to intake manifold.

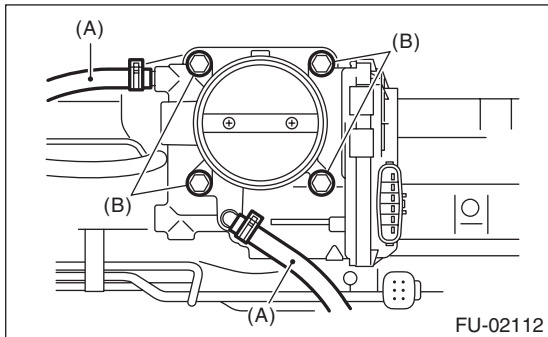

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use new O-rings.

Tightening torque:

8 N·m (0.8 kgf-m, 5.9 ft-lb)