


20. Fuel Pump Control Unit

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear quarter trim. <Ref. to EI-45, REMOVAL, Rear Quarter Trim.>
- 3) Disconnect the connector from fuel pump control unit.
- 4) Remove the fuel pump control unit.

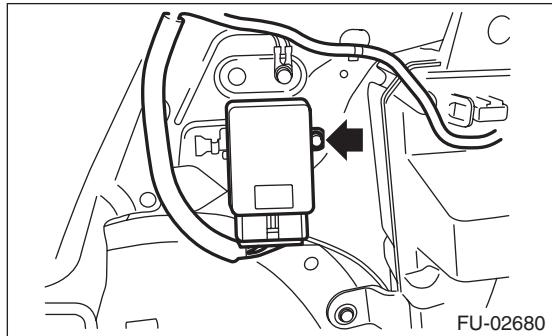

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

13 N·m (1.3 kgf-m, 9.6 ft-lb)