

## 25. Fuel Level Sensor

### A: REMOVAL

**WARNING:**

Place "NO FIRE" signs near the working area.


**CAUTION:**

Be careful not to spill fuel.

**NOTE:**


The fuel level sensor is built in fuel pump assembly.

- 1) Remove the fuel pump assembly. <Ref. to FU(H6DO)-45, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector (A) from fuel pump bracket.
- 3) Remove the fuel temperature sensor (B).
- 4) Remove the fuel level sensor (C).

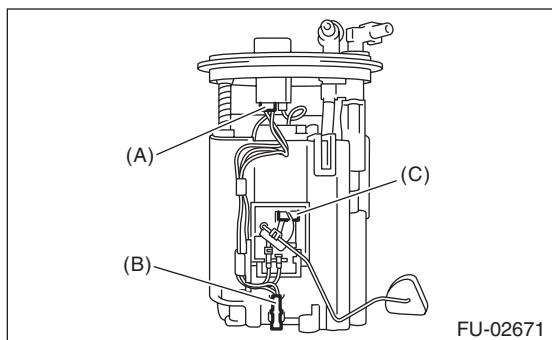

### B: INSTALLATION

- 1) Remove the fuel level sensor (C).
- 2) Install the fuel temperature sensor (B).
- 3) Connect the connector (A) to fuel pump bracket.

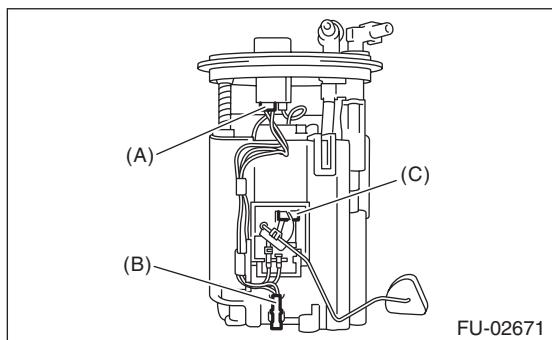

- 4) Install the fuel pump assembly. <Ref. to FU(H6DO)-45, INSTALLATION, Fuel Pump.>