


# Engine Coolant Temperature Sensor

## FUEL INJECTION (FUEL SYSTEMS)

### 4. Engine Coolant Temperature Sensor

#### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.
- 3) Disconnect the connectors from the engine coolant temperature sensor.
- 4) Remove the engine coolant temperature sensor.

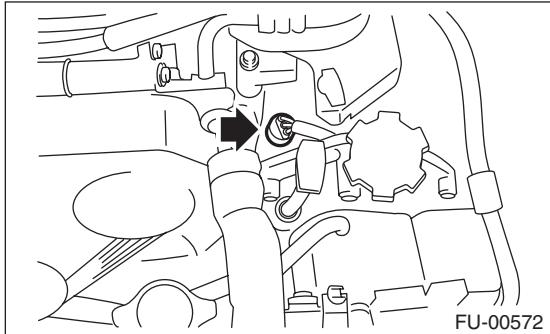

#### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

**18 N·m (1.8 kgf·m, 13.3 ft-lb)**

