

8. Throttle Position Sensor

A: SPECIFICATION

Throttle body is a non-disassembled part, so do not remove the throttle position sensor from throttle body. Refer to "Throttle Body" for removal and installation procedure. <Ref. to FU(H6DO)-12, REMOVAL, Throttle Body.> <Ref. to FU(H6DO)-12, INSTALLATION, Throttle Body.>