



2. Air Cleaner Element

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector from mass air flow and intake air temperature sensor.

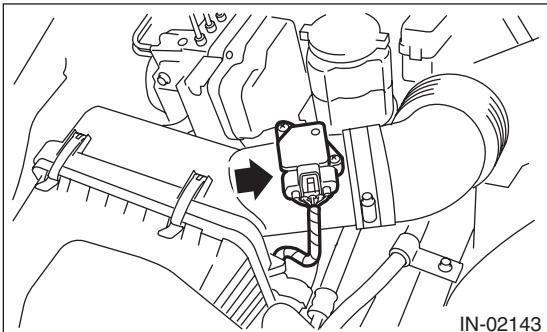

- 3) Remove the clip (A) securing upper side of air cleaner case.

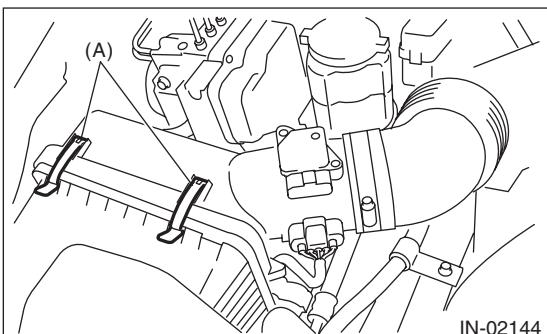


- 4) Pull the air cleaner case (rear) backward of the vehicle, and remove the air cleaner element.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Fasten with a clip after inserting the lower tab of case.

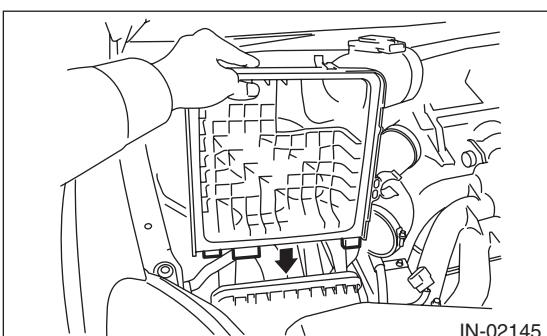

C: INSPECTION

Replace if excessively damaged or dirty.