

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for removal procedure. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H6DO)-5, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check for cracks or loose connections.

MECHANICAL

ME(H6DO)

	Page
1. General Description	2
2. Compression	21
3. Idle Speed	22
4. Ignition Timing	23
5. Intake Manifold Vacuum	24
6. Engine Oil Pressure	25
7. Fuel Pressure	26
8. Valve Clearance	27
9. Engine Assembly	31
10. Engine Mounting	38
11. Preparation for Overhaul	39
12. V-belt	40
13. Crank Pulley	41
14. Front Chain Cover	42
15. Timing Chain Assembly	44
16. Cam Sprocket	50
17. Crank Sprocket	51
18. Rear Chain Cover	52
19. Camshaft	54
20. Cylinder Head	58
21. Cylinder Block	64
22. Oil Flow Control Solenoid Valve	79
23. Oil Switching Solenoid Valve	80
24. Intake and Exhaust Valve	81
25. Piston	82
26. Connecting Rod	83
27. Crankshaft	84
28. Engine Trouble in General	85
29. Engine Noise	92