



7. Oil Pressure Switch

A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from the battery.
- 3) Lift-up the vehicle.
- 4) Remove the under cover.
- 5) Disconnect the terminal from oil pressure switch.

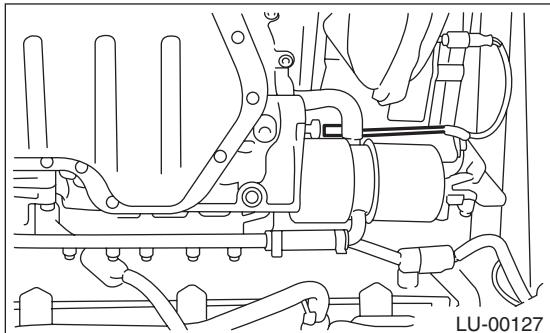

6) Remove the oil pressure switch.

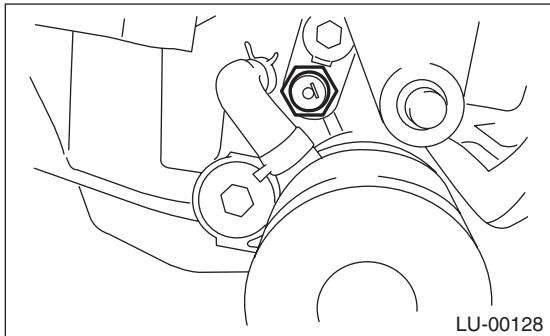


B: INSTALLATION

1) Apply liquid gasket to the oil pressure switch threads.

Liquid gasket:

**THREE BOND 1324 (Part No. 004403042) or
equivalent**

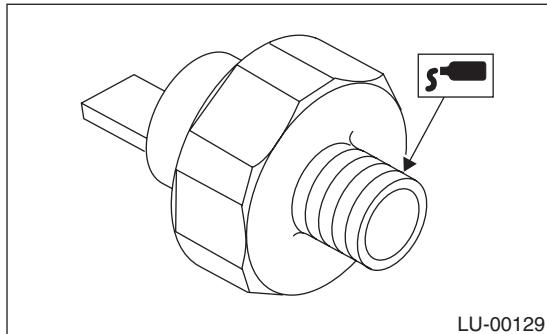


LU-00129

2) Install the oil pressure switch.


Tightening torque:

25 N·m (2.5 kgf-m, 18 ft-lb)

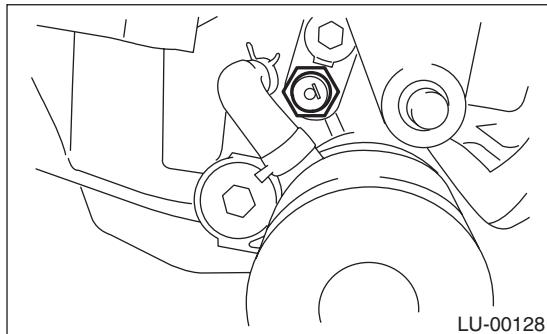

LU-00128

3) Connect the terminal of the oil pressure switch.

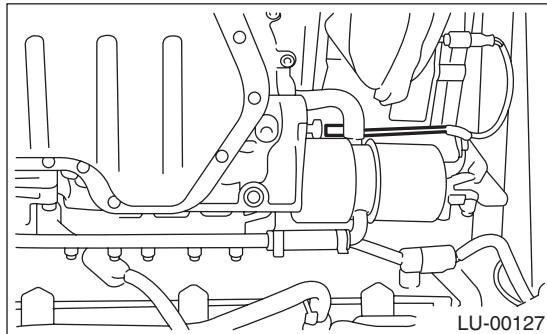

LU-00127

4) Install the under cover.

C: INSPECTION

Make sure oil does not leak or seep from where the oil pressure switch is installed.