

## 27.Crankshaft

### A: SPECIFICATION

Refer to “Cylinder Block” for removal and installation procedures of crankshaft. <Ref. to ME(H6DO)-64, REMOVAL, Cylinder Block.> <Ref. to ME(H6DO)-66, INSTALLATION, Cylinder Block.>