



## 9. Engine Assembly

### A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Change the bolt mounting position from (A) to (B), then completely open the front hood.

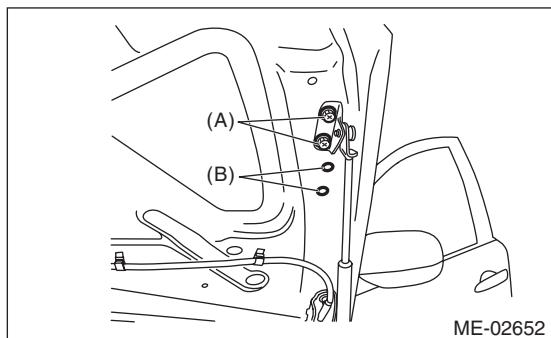

- 3) Remove the collector cover.
- 4) Collect the refrigerant from A/C system. <Ref. to AC-21, PROCEDURE, Refrigerant Recovery Procedure.>
- 5) Release the fuel pressure. <Ref. to FU(H6DO)-38, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 6) Remove the battery from vehicle. <Ref. to SC(H6DO)-25, REMOVAL, Battery.>
- 7) Remove the air intake duct, air cleaner case and air intake chamber. <Ref. to IN(H6DO)-7, REMOVAL, Air Intake Duct.> <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.> <Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>
- 8) Remove the engine front cover.

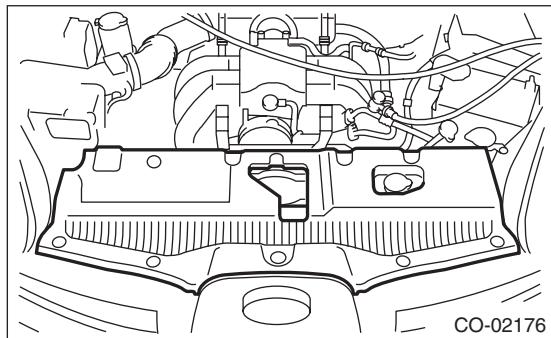


- 9) Remove the radiator from the vehicle. <Ref. to CO(H6DO)-18, REMOVAL, Radiator.>


**NOTE:**

Protect the condenser so that it will not be damaged.


- 10) Remove the fuel hose bracket.

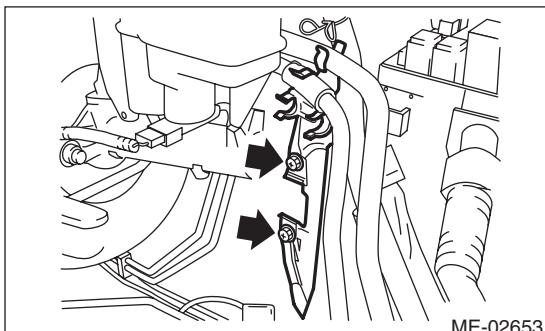

- 11) Remove the V-belts. <Ref. to ME(H6DO)-40, REMOVAL, V-belt.>
- 12) Disconnect the A/C pressure hoses from the A/C compressor. <Ref. to AC-39, REMOVAL, Hose and Tube.>
- 13) Remove the engine ground terminal.

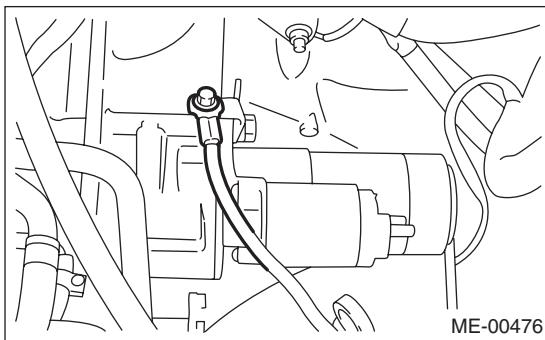

- 14) Disconnect the following connector.
- (1) Engine harness connectors

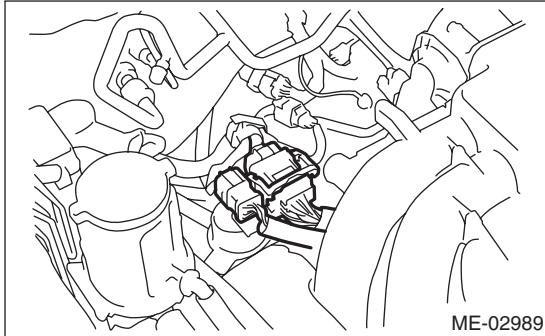


- (2) Generator connector, terminal and A/C compressor connector
- (3) Power steering switch connector

# Engine Assembly

## MECHANICAL

15) Disconnect the following hoses.

(1) Brake booster vacuum hose


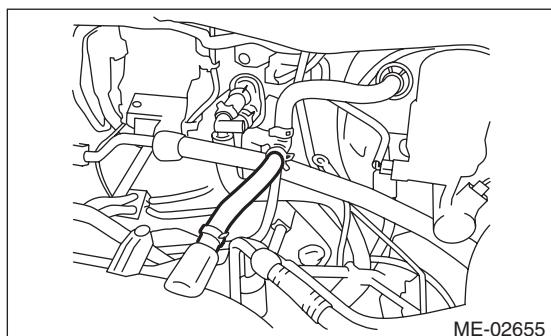


(2) Heater inlet and outlet hoses

16) Remove the power steering pump with the bracket.

**NOTE:**


Do not disconnect the hose and pipe from the power steering pump body.

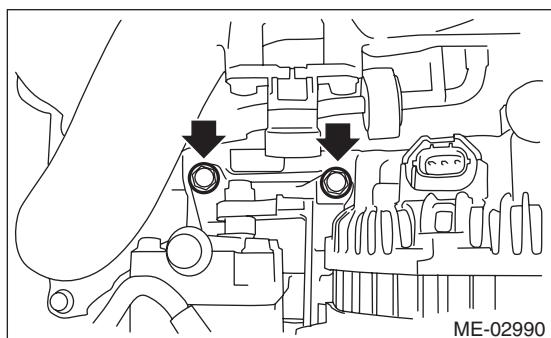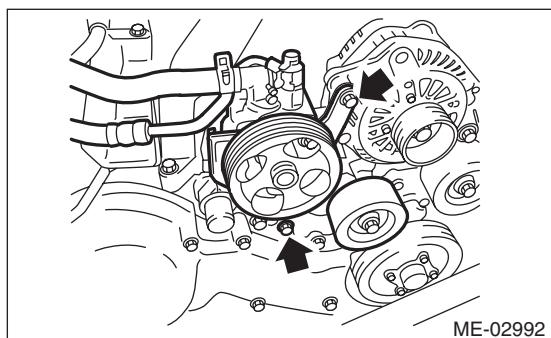


17) Remove the reservoir tank with the bracket.

**NOTE:**


Do not disconnect the hose from the reservoir tank body.

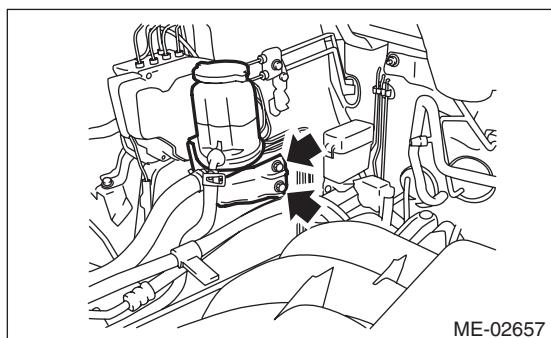

18) Suspend the power steering pump using wire, etc.

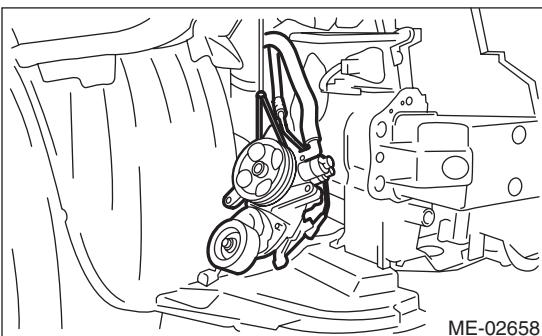

19) Remove the bolts which hold the vacuum pump bracket to the engine and transmission.

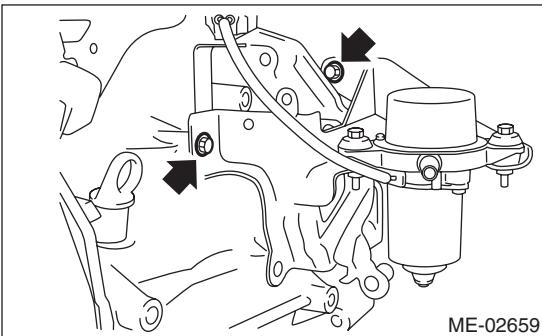


20) Lift-up the vehicle.

21) Remove the front exhaust pipe. <Ref. to EX(H6DO)-4, REMOVAL, Front Exhaust Pipe.>

**NOTE:**

Be careful not to let the front exhaust pipe interfere with water pipes on engine side.


22) Remove the ground cable.

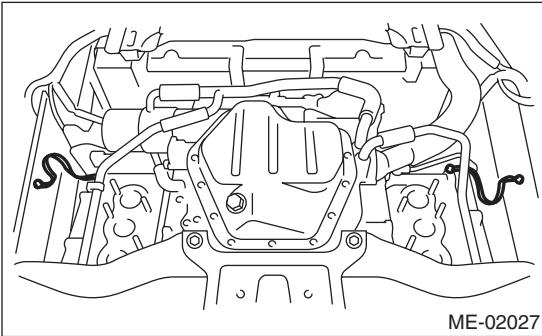

# Engine Assembly


## MECHANICAL

23) Remove the bolts which hold the vacuum pump bracket to the engine and transmission, then remove the vacuum pump with the bracket.

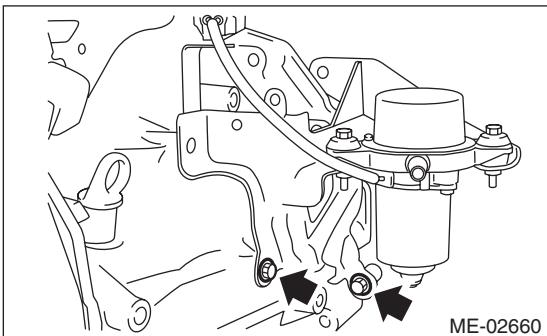


ME-02660

24) Remove the bolts and nuts which hold lower side of transmission to engine.

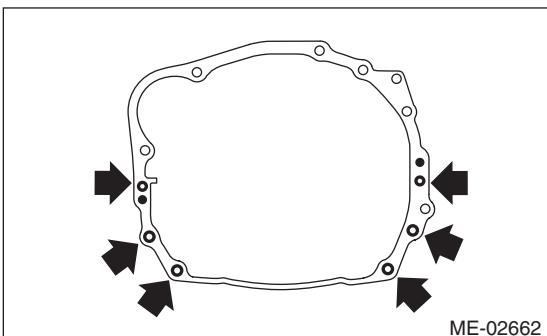

ME-02662

25) Remove the nuts which install front cushion rubber onto front crossmember.

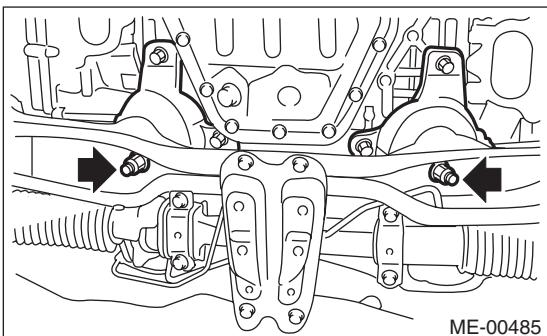

ME-00485


26) Lower the vehicle.

27) Separate the torque converter clutch from drive plate.

(1) Remove the service hole plug.

(2) Remove the bolts which hold torque converter clutch to drive plate.


(3) Remove other bolts while rotating the crankshaft using socket wrench.

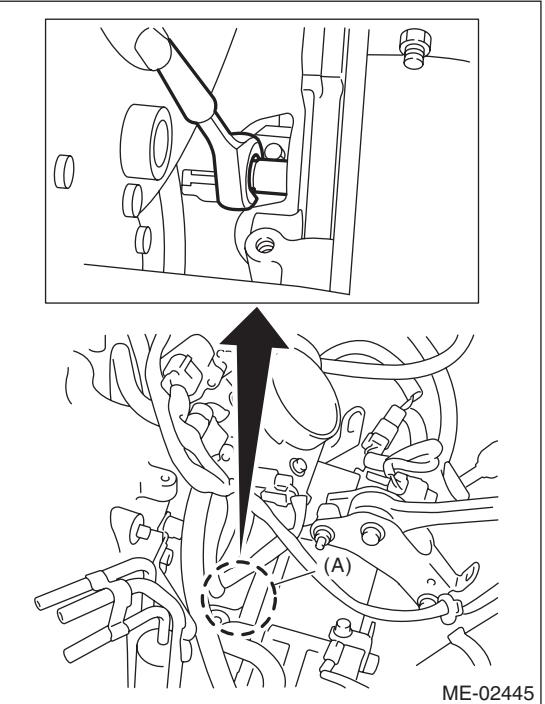

ME-02445

(A) Service hole plug

28) Remove the pitching stopper.

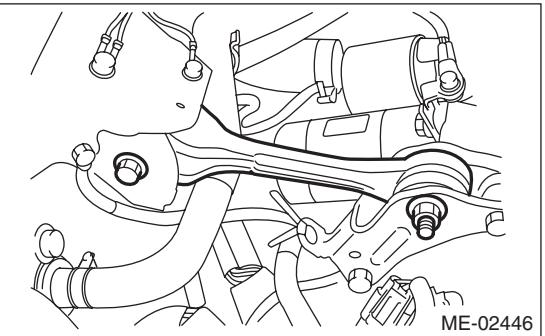

ME-02446

# Engine Assembly

## MECHANICAL

29) Disconnect the fuel delivery hose and evaporation hose.


(1) Disconnect the connector of fuel pipe by pushing the ST in the direction of arrow.

ST 42099AE000 CONNECTOR REMOVER

(2) Remove the clamp, and disconnect the evaporation hose from the pipe.

### CAUTION:

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

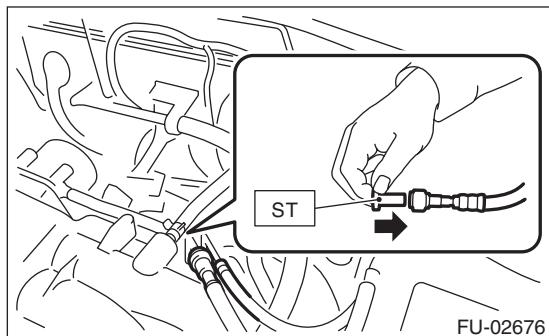


30) Support the engine with a lifting device and wire ropes.

31) Support the transmission with a garage jack.

### CAUTION:

Doing this is very important to prevent the transmission from lowering due to its own weight.

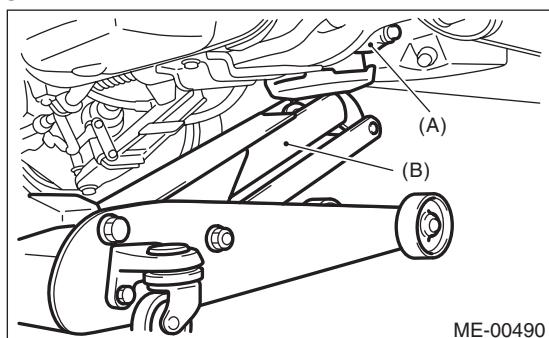

(A) Transmission

(B) Garage jack


32) Separation of engine and transmission:

### CAUTION:

Before removing the engine away from transmission, check to be sure no work has been overlooked.


(1) Remove the starter. <Ref. to SC(H6DO)-6, REMOVAL, Starter.>

(2) Remove the bolts which hold upper side of transmission to engine.

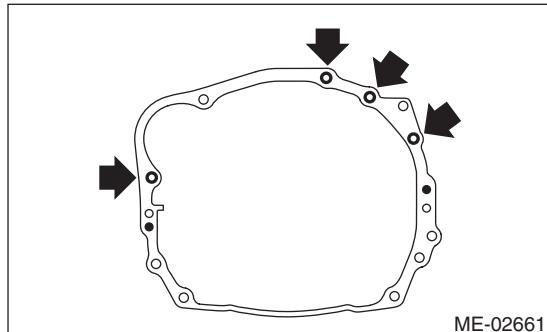

33) Attach the ST to converter case.

ST 498277200 STOPPER SET

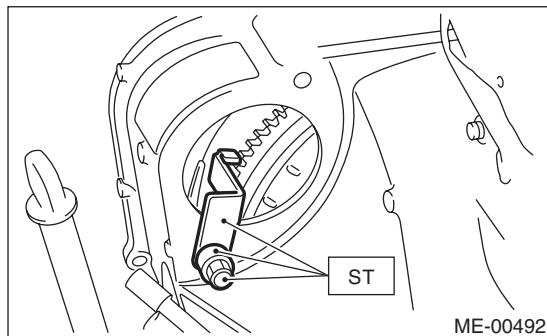

34) Remove the engine from vehicle.

(1) Slightly raise the engine.

(2) Raise the transmission with garage jack.

(3) Move the engine horizontally until main shaft is withdrawn from clutch cover.

(4) Slowly move the engine away from engine compartment.

### NOTE:

Be careful not to damage adjacent parts or body panels with crank pulley, oil level gauge, etc.

35) Remove the front cushion rubbers.

### B: INSTALLATION

1) Install the front cushion rubbers.

#### Tightening torque:

**35 N·m (3.6 kgf-m, 25.8 ft-lb)**

2) Position the engine in engine compartment and align it with transmission.


#### NOTE:

Be careful not to damage adjacent parts or body panels with crank pulley, oil level gauge, etc.

3) Tighten the bolts which hold upper side of transmission to engine.

#### Tightening torque:

**50 N·m (5.1 kgf-m, 37 ft-lb)**

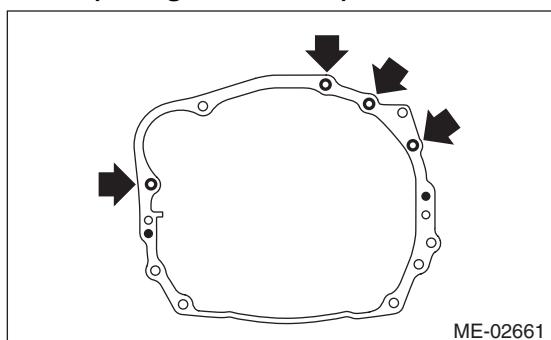

ME-02661

4) Remove the lifting device and wire ropes.


5) Remove the garage jack.

6) Install the pitching stopper.

#### Tightening torque:

**T1: 50 N·m (5.1 kgf-m, 37 ft-lb)**

**T2: 58 N·m (5.9 kgf-m, 42.8 ft-lb)**

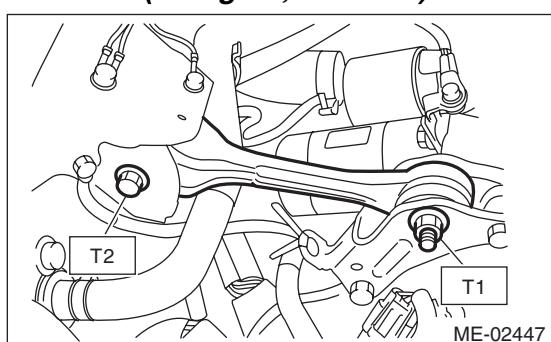

ME-02447

7) Remove the ST from converter case.

#### NOTE:

Be careful not to drop the ST into the converter case when removing the ST.

ST 498277200 STOPPER SET

8) Install the starter. <Ref. to SC(H6DO)-6, INSTALLATION, Starter.>

9) Install the torque converter clutch to drive plate.


(1) Tighten the bolts which hold torque converter clutch to drive plate.

(2) Tighten other bolts while rotating the crank-shaft using socket wrench.

#### Tightening torque:

**25 N·m (2.5 kgf-m, 18 ft-lb)**

(3) Install the service hole plug to prevent foreign matter from being mixed.

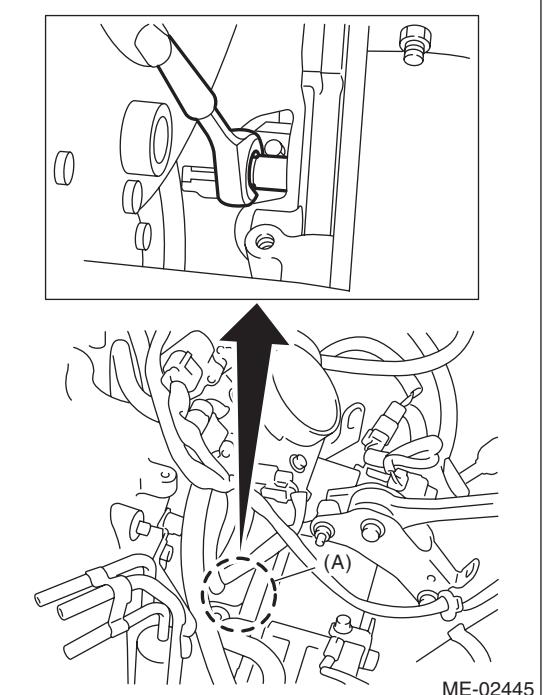

ME-02445


(A) Service hole plug

10) Lift-up the vehicle.

11) Tighten the bolts and nuts which hold lower side of the transmission to engine.

#### Tightening torque:

**50 N·m (5.1 kgf-m, 37 ft-lb)**

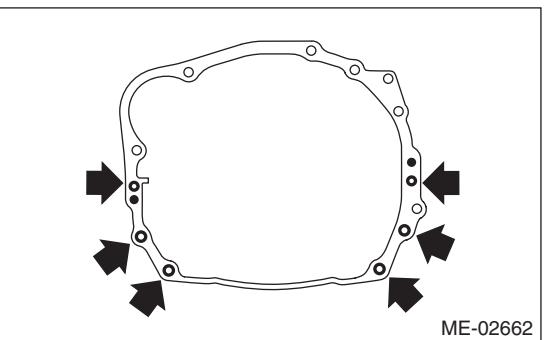

ME-02662


# Engine Assembly

## MECHANICAL

12) Fasten the vacuum pump bracket to the engine and transmission using the bolts.

### Tightening torque:

25 N·m (2.5 kgf-m, 18 ft-lb)

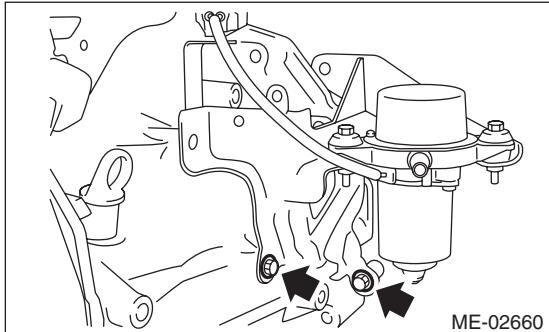


13) Tighten the nuts which install the front cushion rubber onto crossmember.

### Tightening torque:

75 N·m (7.6 kgf-m, 55.3 ft-lb)

#### NOTE:

Make sure the front cushion rubber mounting bolts (A) and locator (B) are securely installed.

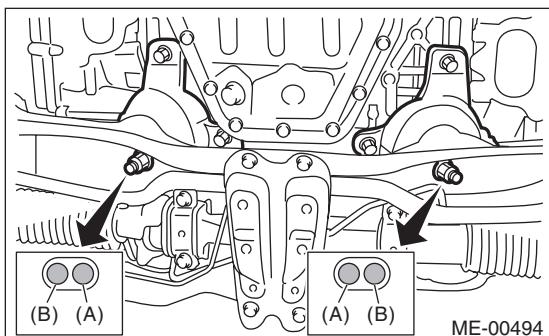


14) Install the front exhaust pipe. <Ref. to EX(H6DO)-5, INSTALLATION, Front Exhaust Pipe.>

#### NOTE:

- Be care not to let the front exhaust pipe interfere with water pipes and crossmember on engine side.
- Be care not to scratch the flange surface of front exhaust pipe with stud bolt on engine.

15) Connect the ground cable.

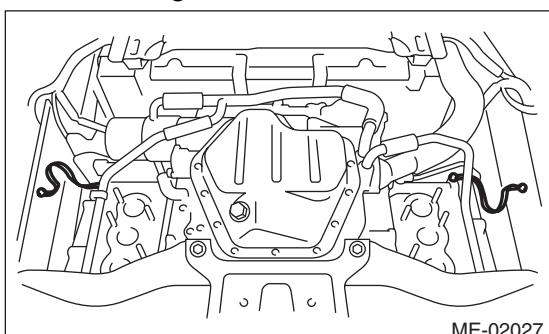


16) Lower the vehicle.

17) Install the fuel hose bracket.

### Tightening torque:


7.5 N·m (0.76 kgf-m, 5.53 ft-lb)

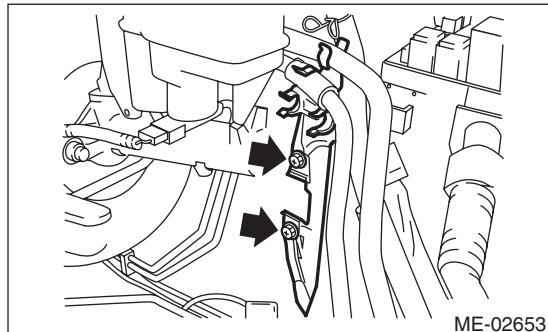

18) Fasten the vacuum pump bracket to the engine and transmission using the bolts.

### Tightening torque:

25 N·m (2.5 kgf-m, 18 ft-lb)


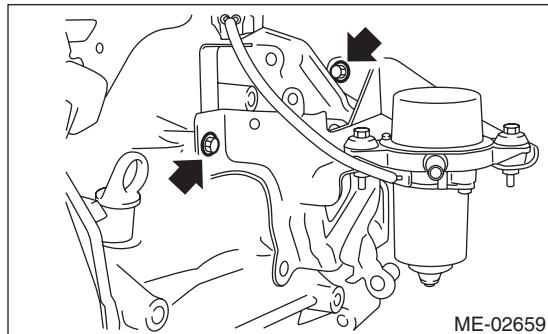


19) Install the power steering pump.

### Tightening torque:

(A) 25 N·m (2.5 kgf-m, 18 ft-lb)


(B) 33 N·m (3.4 kgf-m, 24.3 ft-lb)

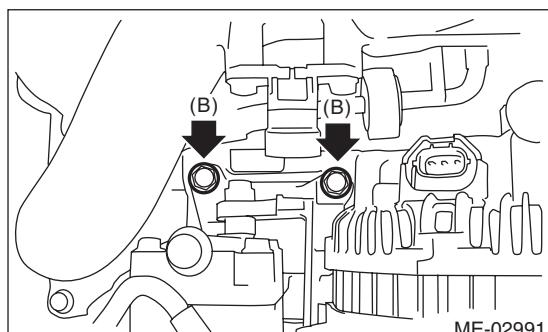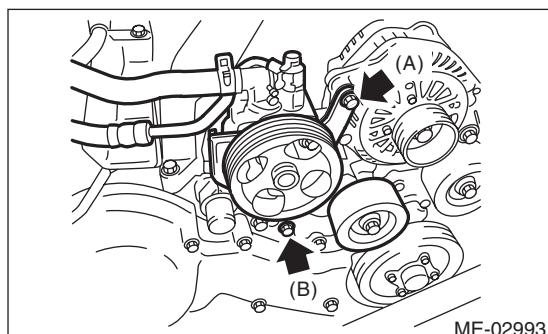

20) Install the reservoir tank.

**Tightening torque:**

33 N·m (3.4 kgf·m, 24.3 ft-lb)

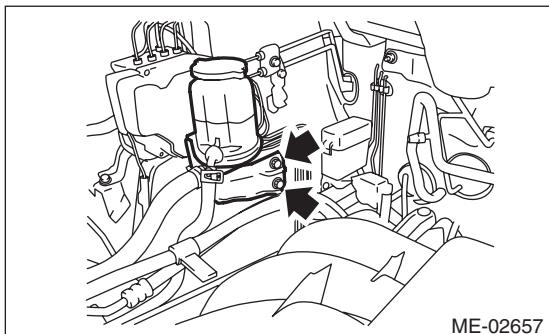


21) Connect the following hoses.

- (1) Fuel delivery hose and evaporation hose
- (2) Heater inlet and outlet hoses
- (3) Brake booster vacuum hose

22) Connect the following connectors.

- (1) Engine harness connectors

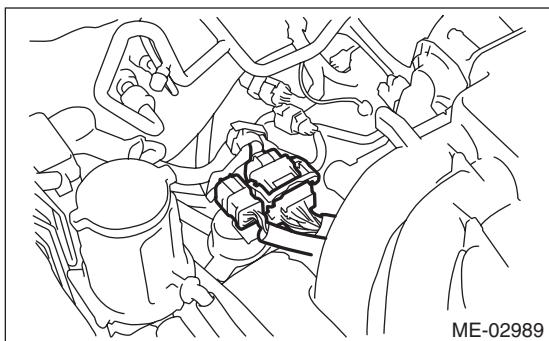

- (2) Generator connector and terminal


- (3) A/C compressor connector

- (4) Power steering switch connector

23) Connect the engine ground terminal.

**Tightening torque:**

14 N·m (1.4 kgf·m, 10.1 ft-lb)

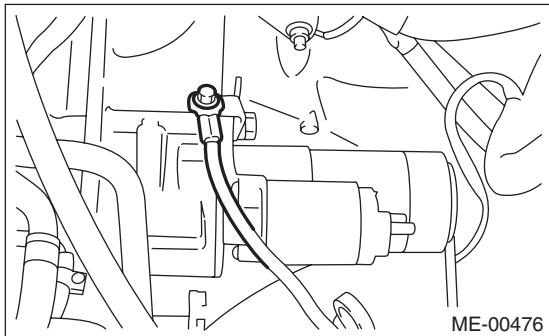

24) Install the A/C pressure hoses. <Ref. to AC-41, INSTALLATION, Hose and Tube.>

25) Install the V-belts. <Ref. to ME(H6DO)-40, INSTALLATION, V-belt.>

26) Install the radiator to vehicle. <Ref. to CO(H6DO)-20, INSTALLATION, Radiator.>

27) Install the fuse of fuel pump to the main fuse box.

28) Install the battery to vehicle. <Ref. to SC(H6DO)-25, INSTALLATION, Battery.>

29) Fill engine coolant. <Ref. to CO(H6DO)-13, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

30) Check the ATF level and replenish it if necessary. <Ref. to 5AT-28, INSPECTION, Automatic Transmission Fluid.>


31) Charge the A/C system with refrigerant. <Ref. to AC-22, PROCEDURE, Refrigerant Charging Procedure.>

32) Install the engine front cover.

33) Install the air intake duct, air cleaner case and air intake chamber. <Ref. to IN(H6DO)-7, INSTALLATION, Air Intake Duct.> <Ref. to IN(H6DO)-5, INSTALLATION, Air Cleaner Case.> <Ref. to IN(H6DO)-6, INSTALLATION, Air Intake Chamber.>

34) Install the collector cover.

35) Change the bolt mounting position from (B) to (A), then close the front hood.

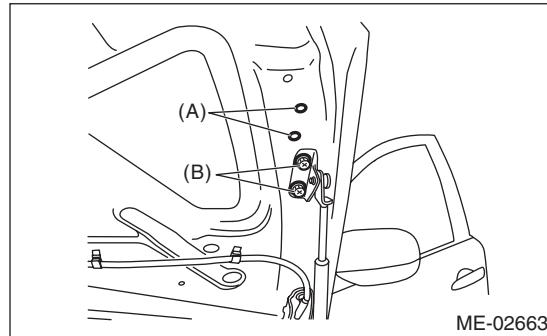

36) Lower the vehicle from the lift.

## C: INSPECTION

1) Check the pipes and hoses are installed firmly.

2) Check the engine coolant and ATF are at specified levels.

3) Start the engine and check for leaks of fuel, exhaust gas, engine coolant, etc. Also check for noise and vibrations.