

### 7. Fuel Line

#### A: INSPECTION

The fuel line is located mostly internally, so check pipes, areas near pipes, and engine compartment piping for rust, hose damage, loose band, etc. If faulty parts are found, repair or replace them. <Ref. to FU(H6DO)-50, Fuel Delivery & Evaporation Lines.>