


### 8. Air Cleaner Element

#### A: REPLACEMENT

- 1) Disconnect the ground cable from the battery.
- 2) Remove the clips (B) on air cleaner case.

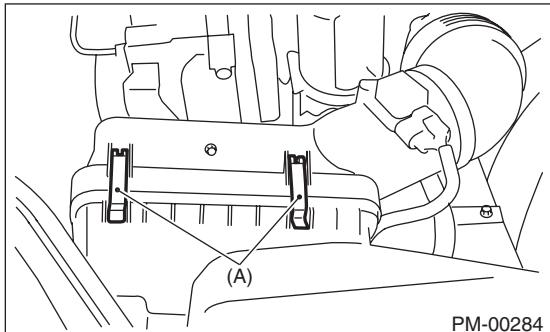

- 3) While pushing the duct toward the back end of the vehicle, remove the air cleaner element.



- 4) Install in the reverse order of removal.

**NOTE:**

Fasten with a clip after inserting the lower tab of case.