

General Diagnostic Table

CONTROL SYSTEMS

7. General Diagnostic Table

A: INSPECTION

Symptom	Possible cause	Corrective action
Select lever	Starter does not run.	Adjust the select cable, or inspect circuit.
	Back-up light does not illuminate.	Adjust the select cable, or inspect circuit.
	AT shift lock system does not operate normally.	Adjust the select cable, or inspect circuit.
	Will not change to manual or sports mode.	Inspect the mode change switch and select lever, or inspect the circuit.
	Up-shift is not engaged at manual mode.	Check the shift-up switch and circuit.
	Down-shift is not engaged at manual mode.	Check the shift-down switch and circuit.

AUTOMATIC TRANSMISSION

5AT

	Page
1. General Description	2
2. Automatic Transmission Fluid	28
3. Differential Gear Oil	30
4. Road Test	31
5. Stall Test	32
6. Time Lag Test	33
7. Line Pressure Test	34
8. Transfer Clutch Pressure Test	35
9. Automatic Transmission Assembly	36
10. Transmission Mounting System	43
11. Extension Case Oil Seal	45
12. Differential Side Retainer Oil Seal	47
13. Inhibitor Switch	48
14. Front Vehicle Speed Sensor	49
15. Rear Vehicle Speed Sensor	51
16. Turbine Speed Sensor 1	54
17. Control Valve Body	55
18. ATF Filter	57
19. Transmission Control Module (TCM)	58
20. ATF Cooler Pipe and Hose	59
21. Air Breather Hose	62
22. Oil Charge Pipe	63
23. Torque Converter Assembly	64
24. Extension Case	65
25. Transfer Clutch	67
26. Rear Drive Shaft	70
27. Reduction Driven Gear	71
28. Center Differential Carrier	74
29. Parking Pawl	76
30. Converter Case	78
31. Oil Pump Cover	80
32. Drive Pinion Shaft Assembly	84
33. Front Differential Assembly	89
34. AT Main Case	94
35. Transmission Control Device	104